



Mandis BSV4285I Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BSV4285I Replacement Remote Control Instructions 

Contents

- [1 Mandis BSV4285I Replacement Remote Control](#)
 - [1.1 Specifications](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Product Information](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis BSV4285I Replacement Remote Control



Specifications

- **Model:** Belson BSV4285I
- **Pages:** 2
- Original Remote Control Functions: Power, Ch.List, Tv/Radio, Fav, Sleep, Input, Sound, Picture, Zoom, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, Info, Recall, Freeze, Guide I/II, Mute, Vol+, VolPR+/Page+, PR-/PageOK, Up, Down, Right, Left
- Replacement Remote Control Functions: Power, List, TV/R, +, Shift + Pre Ch, Sleep, AV, +, Shift + Dual, +, Shift + Format, Eject, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, Info, Pre Ch, Pause, Guide, Dual, Mute, Vol +, Vol Ch +, Ch Ok, Up, Down, Right, Left

Product Usage Instructions

Power

To turn the device on or off:

- Original Remote Control: Press the “Power” button.
- Replacement Remote Control: Press the “Power” button.

Channel List

To access the channel list

- Original Remote Control: Press the “Ch. List” button.

- Replacement Remote Control: Press the “List” button.

FAQ

Q: Where can I purchase a replacement remote control for Belson BSV4285I?
A: You can purchase a replacement remote control for Belson BSV4285I from here.

Product Information



Original	Replacement	Original	Replacement
	Power		Power
	Ch.List		List
	Tv/Radio		TV/R
	Fav		Shift + Pre Ch
	Sleep		Sleep
	Input		AV
	Sound		Shift + Dual
	Picture		Shift + Format
	Zoom		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Original	Replacement
	9
	0
	Info
	Recall
	Freeze
	Guide
	I/II
	Mute
	Vol +
	Vol -
	Ch +
	Ch -
	Ok
	Up
	Down
	Right
	Left





Original	Replacement	Original	Replacement
 Menu	 Menu		
 Exit	 Exit		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Index	 Options		
 Hold	 I<<		
 Size	 Format		
 Text	 Text		
 Subtitle	 Subt		
 Mix	 >>I		
 Reveal	 Stop		
 Cancel	 Back		
 Time	 Shift + AV		
 Subcode	 Shift + Subt		



Belson BSV42851

- <https://all-remote-controls.co.uk/en/Belson/1055085-23472-replacement-remote-control-for-Belson-BSV42851.html>

Documents / Resources

	Mandis BSV42851 Replacement Remote Control [pdf] Instructions BSV42851 Replacement Remote Control, BSV42851, Replacement Remote Control, Remote Control, Control
	Mandis BSV42851 Replacement Remote Control [pdf] Instruction Manual BSV42851, BSV42851 Replacement Remote Control, Replacement Remote Control, Remote Control, Control
	Mandis BSV42851 Replacement Remote Control [pdf] Instruction Manual BSV42851, BSV42851 Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

-  [Replacement remote control for BELSON BSV42851](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)