



Mandis BWARE JB007 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BWARE JB007 Remote Control Instructions 



[BWARE JB007](#)

Contents

- [1 BWARE JB007 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

BWARE JB007 Remote Control



Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TV/R
	SAT
	SAT
	EPG
	Menu

Original	Replacement
	FAV
	Exit
	Up / CH+
	Up / CH+
	Down / CH-
	Down / CH-
	Left / Vol-
	Left / Vol-
	OK
	Right / Vol+
	Right / Vol+
	Red / Audio
	Red / Audio
	Green / Mode
	Yellow / Disp
	Yellow / Disp
	Blue



Original	Replacement
	Shift + CH+ /
	Shift + CH- /
	Back / Return
	Info / Angle
	Shift + 1
	Subtitle / EQ
	Shift + 2
	Shift + Text /
	Shift + 3
	Text / Goto
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Stop / Hold
	AV / Input / RDS

Original	Replacement
	Stop / USB
	Pause
	Rec / Rec Mode



<https://all-remote-controls.co.uk/en/BWARE/1065242-95777-replacement-remote-control-for-BWARE-JB007.html>

Documents / Resources

	Mandis BWARE JB007 Remote Control [pdf] Instructions BWARE JB007, BWARE JB007 Remote Control, Remote Control, Control
	Mandis BWARE JB007 Remote Control [pdf] Instructions BWARE JB007, BWARE JB007 Remote Control, Remote Control, Control

References

- [User Manual](#)