



Mandis BWARE JB007 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BWARE JB007 Replacement Remote Control Instructions 

Contents

- [1 Mandis BWARE JB007 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 USING INSTRUCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis BWARE JB007 Replacement Remote Control



Product Information

Specifications

- Product: BEWARE JB007
- Compatibility: Original and Replacement
- Power Mute: Original, Replacement
- Power Mute / Dimmer: Replacement
- FAV Exit: Original
- Fav / Marker / PC Exit / Cancel / Clear: Replacement
- Up / CH+: Original, Replacement
- Up: Replacement
- 2: Original, Replacement
- CH+ / Page+: Original, Replacement
- 3: Original, Replacement
- Down / CH-: Original, Replacement
- 4: Original, Replacement
- CH- / Page-: Replacement
- 5: Original, Replacement
- Left / Vol-: Original, Replacement
- 6: Original, Replacement
- Vol-: Replacement
- 7: Original, Replacement
- OK: Original, Replacement

- 8: Original, Replacement
- Right / Vol+: Original, Replacement
- 9 0 TV/R SAT SAT EPG Menu: Original
- 9: Original, Replacement
- 0: Original, Replacement
- TV/Radio / + PrograSmhft + 0 Smart / List Guide / EPG / -/- Menu / Home: Original
- Right / Vol+ Red / Audio Red / Audio Green / Mode Yellow / Disp Yellow / Disp Blue Vol+: Original, Replacement
- Red / Netflix / Search Audio / Lang I/II Green / APP / Repeat Yellow / YouTube / Repeat Display / Media Blue / Prime Video / Random: Original, Replacement
- Page+ PageRecall F1 /Info F1 /Info F2 / SUB F2 / SUB F3 / Goto F3 / Goto TXT > I>I Play Stop / USB Stop / USB: Original
- + Shift + CH+ / SPHaigfte++ CH- / Page- Back / Return Info / Angle + Shift + 1 Subtitle / EQ + Shift + 2 + Shift + Text / ShGioftto+ 3 Text / Goto > / Tune+ I>I / Preset+ Play / Slow Stop / Hold AV / Input / RDS: Original
- Stop / USB Pause Rec: Original
- + Shift + 8 Pause / Step / Freeze Rec / Rec Mode: Replacement

Product Usage Instructions

Power Mute

- The Power Mute button is available on both the original and replacement remote controls. Press this button to mute the power output of the device.

Power Mute / Dimmer

- The Power Mute / Dimmer button is only available on the replacement remote control. Press this button to mute the power output of the device and adjust the brightness level of the display.

USING INSTRUCTIONS



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TV/Radio /
	SAT
	SAT
	EPG
	Menu / Home

Original	Replacement
	FAV / Marker / PC
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Down
	CH- / Page-
	Left
	Vol-
	OK
	Right
	Vol+
	Red / Netflix / Search
	Audio / Lang / VII
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Display / Media
	Blue / Prime Video / Random



Original	Replacement
	Shift + CH+ /
	Shift + CH- /
	Back / Return
	Info / Angle
	Shift + 1
	Subtitle / EQ
	Shift + 2
	Shift + Text /
	Shift + 3
	Text / Goto
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Stop / Hold
	AV / Input / RDS

Original	Replacement
	Shift + 8
	Pause / Step / Freeze
	Rec / Rec Mode



<https://all-remote-controls.co.uk/en/BWARE/1065242-95777-replacement-remote-control-for-BWARE-JB007.html>.

	Mandis BWARE JB007 Replacement Remote Control [pdf] Instructions BWARE JB007 Replacement Remote Control, BWARE JB007, Replacement Remote Control, Remote Control
	Mandis BWARE JB007 Replacement Remote Control [pdf] Instructions BWARE JB007 Replacement Remote Control, BWARE JB007, Replacement Remote Control, Remote Control

References

- [User Manual](#)