



Mandis CELED236HDVB5 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis CELED236HDVB5 Remote Control Instruction Manual 

Contents

- [1 Mandis CELED236HDVB5 Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control Function](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis CELED236HDVB5 Remote Control



Product Information

Specifications

- **Model:** RM-C1244
- **Color:** Black
- **Compatibility:** JVC DVD players
- **Power:** 2 AAA batteries (not included)

Product Usage Instructions

- **Power**
To turn on the DVD player, press the Power button.
- **Mute**
To mute the audio, press the Mute button.
- **Eject**
To eject the disc, press the Eject button. Use the Green button on the replacement remote.
- **Title**
Use the Yellow button on the original remote for Title functionality.
- **DVD**

The DVD button on the original remote is used for DVD-specific functions.

- **Blu-Ray**

The Blu-Ray button on the original remote is used for Blu-Ray-specific functions.

- **Play, Pause, Stop**

Use the Play, Pause, and Stop buttons to control playback.

- **Angle**

The Angle button on the original remote allows you to change the viewing angle during playback.

- **Return**

Press the Return button to go back to the previous menu or screen.

- **Text**

The Text button on the original remote is used for displaying text information.

- **Subtitle Display**

Use the Subtitle Display button to enable or disable subtitles.

- **Menu / Info**

Press the Menu / Info button to access the main menu or display information.

- **Menu Up, Left, Right**

Use the Menu Up, Left, and Right buttons to navigate through menus and options.

- **OK**

Press the OK button to confirm a selection or enter a submenu.

- **EPG**

The EPG (Electronic Program Guide) button on the replacement remote is used for accessing program listings.

- **Exit**

Press the Exit button to exit the current menu or screen.

- **Volume Control**

Use the Vol+ and Vol- buttons to adjust the volume.

- **Channel Control**

Use the CH+ and CH- buttons to change channels.

Frequently Asked Questions (FAQ)

- **Q: Where can I find a replacement remote control for JVC RM-C1244?**

A: You can find a replacement remote control for JVC RM-C1244 at [this link](#).

Remote Control Function



Original	Replacement	Original	Replacement
	Power		Return / Text
	Mute		Subt
	Red / Eject		Display
	Red / Eject		Menu / Info
	Green / Title		Menu / Info
	Yellow / DVD		Menu
	Yellow / DVD		Up
	Blue / A-B		Source
	<</[=o]		Left
	>>/[=?]		OK
	I<</[=+]		Right
	>>/[=..]		EPG
	Play		Down
	Pause		Exit
	Stop		Vol +
	Angle / [≡i]		FAV
	Return / Text		CH +



Original	Replacement	Original	Replacement
	Vol-		
	REP		
	CH-		
	1		
	2		
	3		
	4		
	5		
	6		
	7		
	8		
	9		
	Audio		
	0		
	Recall / Goto		



<https://all-remote-controls.co.uk/en/JVC/1064704-81826-replacement-remote-control-for-JVC-RM-C1244.html>.

Documents / Resources



[Mandis CELED236HDVB5 Remote Control](#) [pdf] Instruction Manual
CELED236HDVB5 Remote Control, CELED236HDVB5, Remote Control, Control

References

- [M Replacement remote control for JVC RM-C1244](#)
- [User Manual](#)