



Mandis Clarke Tech REMCON755 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Clarke Tech REMCON755 Remote Control Instructions 



Contents

- [1 Clarke Tech REMCON755 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

Clarke Tech REMCON755 Remote Control

[Clarke-Tech REMCON755](#)



Original		Replacement		Original		Replacement	
	Power		Power		Up / CH+		Up
	Mute		Mute / Dimmer		Up / CH+		CH+ / Page+
	1		1		Exit		Exit / Cancel / Clear
	2		2		Left / Vol-		Left
	3		3		Left / Vol-		Vol-
	4		4		OK		OK
	5		5		Right / Vol+		Right
	6		6		Right / Vol+		Vol+
	7		7		Down / CH-		Down
	8		8		Down / CH-		CH- / Page-
	9		9		Group		Smart / List
	TV / Rad		TV/Radio /		Page+	 + 	Shift + CH+ /
	0		0		Page+		>>I / Preset+
	TV / Sat		Display / Media		Pause		Pause / Step / Freeze
	EPG		Guide / EPG / -/--		Color		Picture / Format
	Info		Info / Angle		Page-	 + 	Shift + CH- /
	Menu		Menu / Home		Page-		I<< / Preset-

[illegible]

<https://all-remote-controls.co.uk/en/Clarke-Tech/1067026-49729-replacement-remote-control-for-Clarke-Tech-REMCON755.html>

Documents / Resources



[Mandis Clarke Tech REMCON755 Remote Control](#) [pdf] Instructions

REMCN755, Clarke Tech REMCON755 Remote Control, Clarke Tech REMCON755, Remote Control, Control, Remote

References

- [M Replacement remote control for CLARKE TECH REMCON755](#)
- [User Manual](#)