



Mandis Clarke Tech REMCON755 Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis Clarke Tech REMCON755 Remote Control Replacement Instructions 

Mandis Clarke Tech REMCON755 Remote Control Replacement Instructions



[Clarke-Tech REMCON755](#)



Original	Replacement	Original	Replacement
	Power		Up
	Mute / Dimmer		CH+ / Page+
	1		Exit / Cancel / Clear
	2		Left
	3		Vol-
	4		Vol-
	5		OK
	6		Right
	7		Vol+
	8		Vol+
	9		Down
	0		CH- / Page-
	TV/Radio /		Smart / List
	Display / Media		Shift + CH+ /
	Guide / EPG / -/--		>>I / Preset+
	Info / Angle		Pause / Step / Freeze
	Menu / Home		Picture / Format
			Shift + CH- /
			I<< / Preset-





Original	Replacement	Original	Replacement
UHF	AV / Input / RDS		
Red / Recall	Red / Netflix / Search		
Red / Recall	Back / Return		
Green / Audio	Green / APP / Repeat		
Green / Audio	Audio / Lang I/II		
Yellow / Text	Yellow / YouTube / Repeat		
Yellow / Text	Text / Goto		
Blue	Blue / Prime Video / Random		
RGB / YPbPr	Setup / OPT / EQ		
Subtitle	Subtitle / EQ		
Wide	Zoom / Size		



<https://all-remote-controls.co.uk/en/Clarke-Tech/1067026-49729-replacement-remote-control-for-Clarke-Tech-REMCON755.html>

Contents

1 Documents / Resources

1.1 References

Documents / Resources

	Mandis Clarke Tech REMCON755 Remote Control Replacement [pdf] Instructions Clarke Tech REMCON755 Remote Control Replacement, Clarke Tech REMCON755, Remote Control Replacement, Control Replacement
	Mandis Clarke Tech REMCON755 Remote Control [pdf] Instructions Clarke Tech REMCON755, Clarke Tech REMCON755 Remote Control, Remote Control, Control
	Mandis Clarke-Tech REMCON755 Remote Control [pdf] Instructions REMCON755, Clarke-Tech REMCON755 Remote Control, Clarke-Tech REMCON755, Remote Control, Control, Remote

References

- [M Replacement remote control for CLARKE TECH REMCON755](#)
- [User Manual](#)