




Mandis Clarke Tech REMCON755 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Clarke Tech REMCON755 Replacement Remote Control Instructions 

Contents

- [1 Mandis Clarke Tech REMCON755 Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 REPLACEMENT PARTS](#)
- [7 BUTTON DESCRIPTION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Mandis Clarke Tech REMCON755 Replacement Remote Control Instructions



Product Information

The Clarke Tech REMCON755 is a remote control designed for use with various electronic devices such as TVs, radios, satellite receivers, and media players. It is available in both original and replacement versions.

Specifications

- **Model:** REMCON755
- **Compatibility:** TVs, Radios, Satellite Receivers, Media Players
- **Available Versions:** Original, Replacement

Product Usage Instructions

Original Remote Control

The original remote control for Clarke Tech REMCON755 has the following buttons:

- **Power:** Turns the device on or off
- **Mute:** Mutes the sound
- **1-9:** Numeric buttons for channel selection or inputting numbers

- **TV/Radio:** Switches between TV and Radio modes
- **0:** Numeric button for inputting zero
- **TV/Sat:** Switches between TV and Satellite modes
- **EPG:** Opens the Electronic Program Guide
- **Info:** Displays information about the current program or media
- **Menu:** Opens the device's menu

Replacement Remote Control

The replacement remote control for Clarke Tech REMCON755 has the following buttons:

- **Power:** Turns the device on or off
- **Mute/Dimmer:** Mutes the sound or adjusts the display brightness
- **1–9:** Numeric buttons for channel selection or inputting numbers
- **TV/Radio:** Switches between TV and Radio modes
- **Program Display:** Shows the current program information
- **Media Guide:** Provides access to media-related features
- **EPG:** Opens the Electronic Program Guide
- **Info:** Displays information about the current program or media
- **Angle:** Adjusts the viewing angle (if applicable)
- **Menu:** Opens the device's menu
- **Home:** Returns to the home screen (if applicable)

Frequently Asked Questions

- **Q:** How do I change the channel using the remote control?
- **A:** To change the channel, use the “Up” or “CH+” button on both the original and replacement remote controls. Pressing this button will increment the channel number by one.
- **Q:** How do I adjust the volume?
- **A:** To adjust the volume, use the “Vol-” button on both the original and replacement remote controls to decrease the volume, and use the “Vol+” button to increase the volume.
- **Q:** How do I access the device's menu?
- **A:** To access the menu, press the “Menu” button on both the original and replacement remote controls. This will open the menu interface on your device's screen.



































 

 

 
 
















OVERVIEW

Clarke Tech REMCON755



REPLACEMENT PARTS

Original		Replacement	
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Rad		TV/Radio /
	0		0
	TV / Sat		Display / Media
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Menu		Menu / Home


	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Group		Smart / List
	Page+		Shift + CH+ / CH+
	Page+		>>I / Preset+
	Pause		Pause / Step / Freeze
	Color		Picture / Format
	Page-		Shift + CH- / CH-
	Page-		I<< / Preset-
	UHF		AV / Input / RDS
	Red / Recall		Red / Netflix / Search
	Red / Recall		Back / Return
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / Text		Yellow / YouTube / Repeat
	Yellow / Text		Text / Goto
	Blue		Blue / Prime Video / Random
	RGB / YPbPr		Setup / OPT /
	Subtitle		Subtitle / EQ
	Wide		Zoom / Size

BUTTON DESCRIPTION



<https://all-remote-controls.co.uk/en/Clarke-Tech/1067026-49729-replacement-remote-control-for-Clarke-Tech-REMCON755.html>

Documents / Resources

	<p> Mandis Clarke Tech REMCON755 Replacement Remote Control [pdf] Instructions Clarke Tech REMCON755 Replacement Remote Control, Clarke Tech REMCON755, Replacement Remote Control, Remote Control </p>
---	--

References

- [M Replacement remote control for CLARKE TECH REMCON755](#)
- [User Manual](#)