



Mandis CS706 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CS706 Remote Control Instructions 

Mandis CS706 Remote Control Instructions



Contents

1 Remote Control

2 Documents / Resources

2.1 References

3 Related Posts

Remote Control



Original	Recharge
----------	----------

 On/Eco	 Power
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Band	 Red
FM ST	 Green

 Info	 Info
 Demo	 Guide
 B. Boost	 Yellow
 EQ	 Pre Ch
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol –
 I<<	 I<<
 Play	 Play



Original	Recharge
----------	----------

 Pause	 Pause
 >>I	 >>I
 Record	 Rec
 Stop	 Stop
 Disc Skip	 List
 Prog	 Shift +  +Sleep
 Intro/CT	 Ok
 Clock	 Options
 ADD	 Media
 PTY	 Dual
 DEL	 Exit
 Timer	 Shift +  +AV
 Repeat/RDS	 Text
 Sleep	 Sleep

<https://tout-telecommandes.fr/fr/Thomson/1056345-10891-telecommande-de-remplacement-pour-Thomson-CS706-56292200.html>



Mandis



[Mandis CS706 Remote Control](#) [pdf] Instructions
CS706 Remote Control, CS706, Remote Control, Control

References

- **[M](#)** [Télécommande qui remplace THOMSON CS706 \(56292200\)](#)
- [User Manual](#)