



Mandis CS706 Thomson Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CS706 Thomson Remote Control Instructions 

Contents

- [1 Mandis CS706 Thomson Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 Product Overview](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis CS706 Thomson Remote Control



Product Information

Specifications

- Model: CS706
- Brand: Thomson
- Remote Control Type: Replacement Remote Control
- Compatible with: Thomson CS706 and 56292200
- Website: <https://tout-telecommandes.fr/fr/Thomson/1056345-10891-telecommande-de-remplacement-pour-Thomson-CS706-56292200.html>

Product Usage Instructions

Power and Source Controls

To turn the device on or off, press the “On/Eco” button. Use the “Source” button to switch between different input sources.

Navigation Controls

Use the arrow buttons (Up, Down, Right, Left) to navigate through menus and options. The “Disc Skip” button allows you to skip to the next disc in a multi-disc player.

Audio Controls

Adjust the volume using the “Vol+” and “Vol||” buttons. Press the “Mute” button to mute the sound. The “B.Boost” button activates the bass boost feature. Use the “EQ” button to access different equalizer presets.

Media Playback Controls

Press the “Play/Pause” button to start or pause media playback. Use the “Stop” button to stop playback. The “Intro/CT” button can be used to play a short preview of each track. The “Repeat/RDS” button enables repeat playback and RDS functionality.

Timer and Clock Controls

Set the clock using the “Clock” button. The “ADD” and “DEL” buttons are used to add or delete timer events. The “Timer” button allows you to access and configure the timer settings.

Additional Controls

The remote control has additional buttons for specific functions such as “Record”, “List”, “Shift”, “Sleep”, “Ok”, “Options”, “Media”, “Dual”, “Exit”, and “Text”. Please refer to the user manual for detailed instructions on using these buttons.

Frequently Asked Questions (FAQ)

Q: What is the model number of the remote control?

A: The model number of the remote control is CS706.

Q: Is the remote control compatible with Thomson CS706 and 56292200?

A: Yes, the remote control is compatible with Thomson CS706 and 56292200.

Product Overview



Remote Using Instruction

Original/ Recharge

	On/Eco		Power		Pause		Pause
	Source		AV		>>I		>>I
	Up		Up		Record		Rec
	Down		Down		Stop		Stop
	Right		Right		Disc Skip		List
	Left		Left		Prog	 + 	Shift + Sleep
	Band		Red		Intro/CT		Ok
	FM ST		Green		Clock		Options
	Info		Info		ADD		Media
	Demo		Guide		PTY		Dual
	B.Boost		Yellow		DEL		Exit
	EQ		Pre Ch		Timer	 + 	Shift + AV
	Mute		Mute		Repeat/RDS		Text
	Vol+		Vol +		Sleep		Sleep
	Vol-		Vol -				
	I<<		I<<				
	Play		Play				

- <https://tout-telecommandes.fr/fr/Thomson/1056345-10891-telecommande-de-remplacement-pour-Thomson-CS706-56292200.html>

Documents / Resources

	Mandis CS706 Thomson Remote Control [pdf] Instructions CS706 Thomson Remote Control, CS706, Thomson Remote Control, Remote Control, Control
---	--

References

- [User Manual](#)

