



Mandis CT-8003 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CT-8003 Remote Control Instructions 



[Toshiba CT8003-TV \(!\[\]\(d66ff64371a51729ac8c1cdaa685ba6f_img.jpg\) \)](#)

Contents

- [1 CT-8003 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

CT-8003 Remote Control



Original	Replacement
 ◀◀ / [≡⏮]	 <<
 ◀◀ / [≡⏮]	 SETTINGS OPT Options
 ▶▶ / Subtitle	 AC SUBT Subt
 ▶▶ / Subtitle	 >>
 ▲	 MORE SMART Smart
 ■ / [=□]	 ■ Stop
 ◀◀ / [=⏮]	 ZOOM ▲ Eject
 ◀◀ / [=⏮]	 ◀◀
 ▶▶ / [⏭]=X	 ▶▶
 ▶▶ / [⏭]=X	 RETURN BACK Back
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue





Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	_ Menu/DVD
	- Exit/Back
	- Up
	Left
	OK

Original	Replacement
	Right
	Down
	Vol +
	Vol -
	Pause
	Play
	Dual
	TV/R
	Subt
	Smart
	Stop
	Eject
	I<<
	I>>
	Back



Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Source
	P+
	P-
	Vol-
	Vol+

Original	Replacement
	Pause
	Play
	Dual
	TV/R
	Subt
	Smart
	Stop
	Eject
	I<<
	I>>



<https://all-remote-controls.co.uk/en/Toshiba/1060616-4602-replacement-remote-control-for-Toshiba-CT-8003-V30042166.html>

Documents / Resources

	Mandis CT-8003 Remote Control [pdf] Instructions CT-8003 Remote Control, CT-8003, Remote Control, Control
	Mandis CT-8003 Remote Control [pdf] Instructions CT-8003, V30042166, CT-8003 Remote Control, Remote Control, Control

References

-  [Replacement remote control for TOSHIBA CT-8003 \(V30042166\)](#)
- [User Manual](#)