



Mandis CT01 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CT01 Remote Control Instructions 

Mandis CT01 Remote Control Instructions



Contents

1 Remote Button Control

2 Documents / Resources

2.1 References

3 Related Posts



Original	Replacement	Original	Replacement
	Power		Left
	Reset		Enter
	1		Right
	2		Down
	3		Exit / Cancel / Clear
	4		Edit
	5		F1
	6		F2
	7		F3
	8		F4
	9		F5
	0		F6
	Mute		F7
	Shift		F8
	Interval		F9
	Clock		F10
	Up		F11



Documents / Resources



[Mandis CT01 Remote Control](#) [pdf] Instructions
CT01 Remote Control, CT01, Remote Control, Control

References

- [M Replacement remote control for TIMER-DIG-6 CTS](#)
- [User Manual](#)