



Mandis CT01 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CT01 Replacement Remote Control Instructions 



Contents

- [1 CT01 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

CT01 Replacement Remote Control



Original	Replacement
	Power
	Reset
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Mute / Dimmer
	Smart / List
	Display / Media
	Fav / Marker / PC
	Up

Original	Replacement
	Left
	Enter
	Right
	Down
	Exit / Cancel / Clear
	Back / Return
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	Picture / Format
	Zoom / Size
	Sleep / Timer
	TV/Radio /
	D.Menu / Top
	Setup / OPT /
	Text / Goto



Documents / Resources



[Mandis CT01 Replacement Remote Control](#) [pdf] Instructions

CT01 Replacement Remote Control, CT01, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for TIMER-DIG-6 CTS](#)
- [User Manual](#)