

Mandis CT01 Replacement Remote Control User Guide

Contents

- [1 Documents / Resources](#)
 - [1.1 References](#)
- [2 Related Posts](#)



[CT01](#)



Original		Replacement	
	Power		Power
	Reset		Guide / EPG / --
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute / Dimmer
	Shift		Smart / List
	Interval		Display / Media
	Clock		Fav / Marker / PC
	Up		Up
	Left		Left

	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Edit		Back / Return
	F1		Sound / Title
	F2		Audio / Lang I/II
	F3		Subtitle / EQ
	F4		Eject / Surround
	F5		Picture / Format
	F6		Zoom / Size
	F7		Sleep / Timer
	F8		TV/Radio /
	F9		D.Menu / Top
	F10		Setup / OPT /
	F11		Text / Goto



<https://all-remote-controls.co.uk/en/Timer-Dig-6/1064815-95434-replacement-remote-control-for-Timer-Dig-6-CTS.html>

Documents / Resources



[Mandis CT01 Replacement Remote Control](#) [pdf] User Guide

CT01 Replacement Remote Control, CT01, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)