



Mandis CTS Timer-Dig-6 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis CTS Timer-Dig-6 Remote Control Instruction Manual 

Contents

- [1 Mandis CTS Timer-Dig-6 Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 Replacement Parts](#)
- [7 BUTTON DESCRIPTIONS](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Mandis CTS Timer-Dig-6 Remote Control



Product Information

The product is a remote control for Timer Dig 6 CTS. It is a replacement remote control that can be used with the Timer Dig 6 CTS device.

Specifications

- Model: CT01
- Compatible with: Timer Dig 6 CTS
- Color: Black
- Power Source: 2 AAA batteries (not included)

Product Usage Instructions

Power Reset

To perform a power reset, follow these steps:

1. Press and hold the Power button for 5 seconds.
2. The device will turn off and then turn back on.

Power Guide / EPG / -/-

To access the Power Guide or EPG (Electronic Program Guide) and navigate through channels, use the following buttons:

- 1, 2, 3, 4, 5, 6, 7, 8, 9, 0 – These buttons can be used to directly enter channel numbers.
- Mute – Press this button to mute the audio.
- Dimmer – Use this button to adjust the brightness of the display.
- Smart / List Display / Media – These buttons are used for smart functions, displaying lists, or accessing media.
- Fav / Marker / PC Up – These buttons can be used to mark favorite channels, set markers, or navigate up on a PC interface.

Left Enter Right Down Exit Edit

These buttons are used for navigation and editing purposes. Use the following buttons:

- Left – Press this button to navigate left.
- Enter – Use this button to confirm a selection or enter a menu.
- Right – Press this button to navigate right.
- Down – Use this button to navigate down.
- Exit – Press this button to exit the current menu or screen.
- Edit – Use this button to enter edit mode or make changes.

F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11

These buttons are function keys that can be used for various purposes depending on the context. The specific functions assigned to these keys may vary based on the device being controlled.

Exit / Cancel / Clear

To exit a menu, cancel an action, or clear input, use the following buttons:

- Exit – Press this button to exit the current menu or screen.
- Cancel – Use this button to cancel an ongoing action.
- Clear – Press this button to clear any input or text.

Back / Return Sound / Title Audio / Lang I/II Subtitle / EQ Eject / Surround Picture / Format Zoom / Size Sleep / Timer

These buttons are used for specific functions related to audio, video, and settings. Use the following buttons:

- Back / Return – Press this button to go back or return to the previous screen/menu.
- Sound / Title Audio / Lang I/II – Use these buttons to adjust sound settings or select audio language options.
- Subtitle / EQ – These buttons are used for subtitle options or equalizer settings.
- Eject / Surround – Press these buttons to eject media or enable surround sound.
- Picture / Format – Use these buttons to adjust picture settings or select format options.
- Zoom / Size – These buttons are used for zooming or adjusting screen size.
- Sleep / Timer – Press these buttons to set sleep timer or program a timer for specific actions.

TV/Radio / D.MPreongura/mTop SetuMpe/nOuPT / TexTto/oGlsoto

These buttons are used for specific functions related to TV, radio, or text options. Use the following buttons:

- TV/Radio – Press this button to switch between TV and radio modes.
- D.MPreongura/mTop – Use this button to access the digital media player or top menu.
- SetuMpe/nOuPT – Press this button to access setup menu or switch output options.
- TexTto/oGlsoto – Use this button to access text options or toggle subtitles on/off.

FAQ (Frequently Asked Questions)

How do I replace the batteries in the remote control?

To replace the batteries, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the compartment cover open and remove the old batteries.
3. Insert two fresh AAA batteries, ensuring correct polarity.
4. Slide the compartment cover back into place.

Can I use this remote control with other devices?

No, this remote control is specifically designed for use with the Timer Dig 6 CTS device and may not be compatible with other devices.

How do I access the electronic program guide?

To access the electronic program guide, press the Power Guide or EPG button on the remote control. Use the navigation buttons to scroll through the available channels and select the desired program.

What should I do if the remote control is not functioning properly?















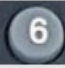


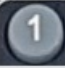
















If the remote control is not functioning properly, try the following steps:














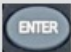








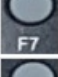








1. Check if the batteries are inserted correctly and replace them if necessary.
2. Ensure there are no obstructions between the remote control and the device.
3. Try resetting the device by performing a power reset (refer to the Power Reset section in the user manual).
4. If the issue persists, contact customer support for further assistance.

OVERVIEW



Replacement Parts

Original		Replacement	
	Power		Power
	Reset		Guide / EPG / -/--
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute / Dimmer
	Shift		Smart / List
	Interval		Display / Media
	Clock		Fav / Marker / PC
	Up		Up

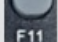 
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Edit		Back / Return
	F1		Sound / Title
	F2		Audio / Lang I/II
	F3		Subtitle / EQ
	F4		Eject / Surround
	F5		Picture / Format
	F6		Zoom / Size
	F7		Sleep / Timer
	F8		TV/Radio /
	F9		D.Menu / Top
	F10		Setup / OPT /
	F11		Text / Goto

BUTTON DESCRIPTIONS



<https://all-remote-controls.co.uk/en/Timer-Dig-6/1064815-95434-replacement-remote-control-for-Timer-Dig-6-CTS.html>

Documents / Resources

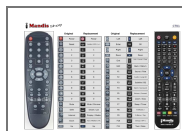

[Mandis CTS Timer-Dig-6 Remote Control](#) [pdf] Instruction Manual
CTS Timer-Dig-6 Remote Control, CTS Timer-Dig-6, Remote Control, Control

References

- [Replacement remote control for TIMER-DIG-6 CTS](#)
- [User Manual](#)