



Mandis CTS01 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CTS01 Remote Control Instructions 

Contents

- [1 Mandis CTS01 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis CTS01 Remote Control



Product Information

Specifications

- Model: Timer Dig 6 CTS
- Product Type: Replacement Remote Control
- Compatibility: CT01
- Website: <https://all-remote-controls.co.uk/en/Timer-Dig-6/1064815-95434-replacement-remote-control-for-Timer-Dig-6-CTS.html>

Product Usage Instructions

Power Reset

To perform a power reset, follow these steps:

1. Press the Power button to turn off the device.
2. Unplug the power cord from the device and the power outlet.
3. Wait for at least 10 seconds.
4. Plug the power cord back into the device and the power outlet.
5. Press the Power button to turn on the device.

Original Remote Control Buttons

The original remote control has the following buttons:

- Power: Turns the device on or off.
- Reset: Resets the device to its default settings.
- Mute: Mutes the audio.
- Shift: Activates the shift function for secondary button functions.
- Interval Clock Up: Increases the interval clock time.
- Guide / EPG: Displays the electronic program guide.
- -/+: Adjusts the volume or channel.
- Left, Enter, Right, Down: Navigation buttons for menu selections.
- Exit: Exits the current menu or screen.
- Edit: Enters edit mode for customizing settings.
- F1 to F11: Programmable function buttons.

Replacement Remote Control Buttons

The replacement remote control has the following buttons:

- Power: Turns the device on or off.
- Guide / EPG: Displays the electronic program guide.
- -/+: Adjusts the volume or channel.
- Left, OK, Right, Down: Navigation buttons for menu selections.
- Exit / Cancel / Clear: Exits the current menu or screen, cancels actions, or clears input fields.
- Back / Return: Returns to the previous menu or screen.
- Sound / Title: Adjusts the audio settings or displays the title information.
- Audio / Lang I/II: Selects the audio language or audio track.
- Subtitle / EQ: Selects the subtitle language or equalizer settings.
- Eject / Surround: Ejects a disc or activates the surround sound mode.
- Picture / Format: Adjusts the picture settings or selects the picture format.
- Zoom / Size: Zooms in or out on the screen or adjusts the screen size.
- Sleep / Timer: Sets a sleep timer or a programmable timer.
- TV/Radio: Switches between TV and radio modes.
- D.MPreongura/mTop: Accesses the digital media player or the top menu.
- SetuMpe/nOuPT: Sets up the media player or switches the output source.
- TexTto/oGIsoto: Enters text or toggles between uppercase and lowercase characters.

FAQ (Frequently Asked Questions)

- Q: How can I perform a power reset?

A: To perform a power reset, follow the steps mentioned in the “Power Reset” section above.

- Q: Where can I purchase the replacement remote control?

A: You can purchase the replacement remote control from the official website at

<https://all-remote-controls.co.uk/en/Timer-Dig-6/1064815-95434-replacement-remote-control-for-Timer-Dig-6-CTS.html>.




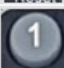

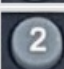
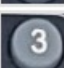



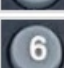
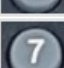


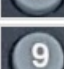









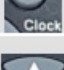

- Q: What is the compatibility of the replacement remote control?











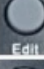

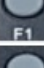
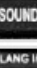
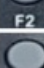
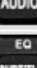




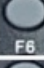

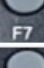
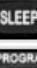



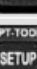






A: The replacement remote control is compatible with the CT01 model.

OVERVIEW

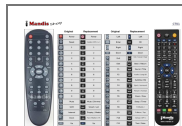 


BUTTON FUNCTION

| Original | | Replacement | |
|---|----------|---|--------------------|
|  | Power |  | Power |
|  | Reset |  | Guide / EPG / -/-- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Mute |  | Mute / Dimmer |
|  | Shift |  | Smart / List |
|  | Interval |  | Display / Media |
|  | Clock |  | Fav / Marker / PC |
|  | Up |  | Up |

| Original | Replacement |
|---|---|
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Edit |  Back / Return |
|  F1 |  Sound / Title |
|  F2 |  Audio / Lang I/II |
|  F3 |  Subtitle / EQ |
|  F4 |  Eject / Surround |
|  F5 |  Picture / Format |
|  F6 |  Zoom / Size |
|  F7 |  Sleep / Timer |
|  F8 |  TV/Radio / |
|  F9 |  D.Menu / Top |
|  F10 |  Setup / OPT / |
|  F11 |  Text / Goto |

Documents / Resources



[Mandis CTS01 Remote Control](#) [pdf] Instructions
CTS01 Remote Control, CTS01, Remote Control, Control

References

- [Replacement remote control for TIMER-DIG-6 CTS](#)
- [User Manual](#)