

# **Mandis CU-PD055 Remote Control Instructions**

Home » Mandis » Mandis CU-PD055 Remote Control Instructions

#### Contents

- 1 Mandis CU-PD055 Remote Control
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAC
- **5 Remote Using Instructions**
- 6 Documents / Resources
  - **6.1 References**
- 7 Related Posts



**Mandis CU-PD055 Remote Control** 



## **Product Information**

# **Specifications**

• Product Name: Pioneer CU-PD055

• Compatibility: Replacement remote control for Pioneer devices

• Model Number: PWW1058

## **Product Usage Instructions**

## **Power and Playback Controls**

- To power the device on or off, press the "Open/Close" button. To start playback, press the "Play" button.
- Use the "Stop" button to stop the playback. Press the "Pause" button to pause the playback.

## **Repeat and Random Play**

• The "Repeat" button allows you to repeat a specific track or playlist. The "Random Play" button enables random playback of tracks or playlists.

### **Manual Navigation**

- Use the "Manual" button to access the manual navigation mode.
- This mode allows you to browse through different sections of the content.

#### **Index and Numbered Buttons**

- The "Index" button allows you to access the index of available content.
- The numbered buttons (1-10) can be used to directly select a specific track or playlist.

### **Replacement Controls**

If you are using a replacement remote control, the following additional buttons are available:

- "Eject" Use this button to eject the disc or media.
- "Text" Press this button to access the text function.
- "TV/R" Use this button to switch between TV and radio modes.
- "Left/Right" These buttons allow you to navigate left or right through menus and options.
- "Guide" Press this button to access the guide function.
- "Pre Ch" Use this button to switch to the previous channel.
- "Exit" Press this button to exit the current menu or mode.
- "Smart Sleep" Use this button to activate the Smart Sleep feature.
- "AV" Press this button to switch to the AV input mode.

#### **Additional Controls**


- The remote control also features additional buttons such as "+10", "20", "Clear", "Check", "PGM", and "Time".
- These buttons have specific functions related to programming, time settings, and navigation.

### **FAQ**

- Q: What devices are compatible with the Pioneer CU-PD055 remote control?
  - A: The Pioneer CU-PD055 remote control is compatible with various Pioneer devices. Please refer to the product specifications or contact Pioneer customer support for a detailed compatibility list.
- Q: How can I access the index of available content?
  - A: Press the "Index" button on the remote control to access the index of available content.
- Q: How do I navigate through different sections of the content?
  - **A:** In the manual navigation mode, use the "Manual" button to browse through different sections of the content.
- Q: Can I use a replacement remote control with the Pioneer CU-PD055?
  - A: Yes, you can use a replacement remote control with the Pioneer CU-PD055. However, please ensure

# **Remote Using Instructions**

# Original / Replacement

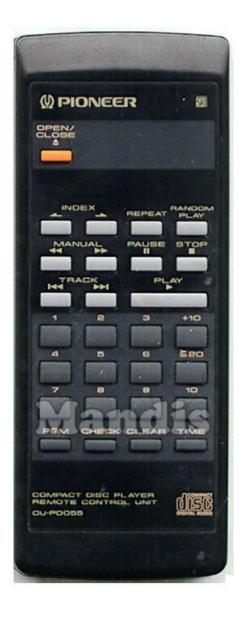




OPEN/ CLOSE	Open/Close	ZOOM	Eject
- No.	Play	PLAY MODE	Play
втор	Stop		Stop
PAUSE	Pause	II	Pause
REPEAT	Repeat	TEXT	Text
PLAY	Random Play	SEARCH TV/R	TV/R
NUAL	Manual >>	( <b>&gt;</b> )	>>
MANL 44	<< Manual	(*)	<<
H4	I<< Track	K	l<<
PACK	Track >>I	×	>>I
NDI	< Index	0	Left
OEX	Index >	0	Right
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5



https://all-remote-controls.co.uk/en/Pioneer/1063049-5689-replacement-remote-control-for-Pioneer-CU-PD055-PWW1058.html

### **Documents / Resources**

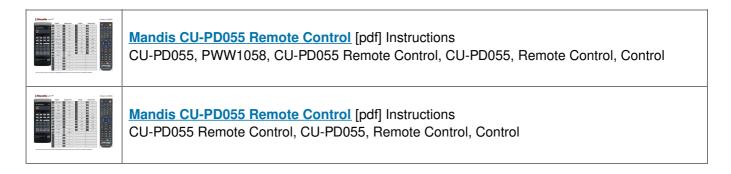

### References

- Replacement remote control for PIONEER CU-PD055 (PWW1058)
- User Manual

Manuals+, Privacy Policy