



Mandis CU-PD055 Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis CU-PD055 Replacement Remote Control Instruction Manual 

Contents

- [1 Mandis CU-PD055 Replacement Remote Control](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control Function](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis CU-PD055 Replacement Remote Control



Product Information

Specifications

- **Brand:** Pioneer
- **Model:** CU-PD055
- **Compatible with:** Pioneer audio/video devices
- **Color:** Black
- **Dimensions:** N/A
- **Weight:** N/A
- **Power Source:** 2 AAA batteries (not included)

Product Usage Instructions

Power On/Off:

To power the device, press the “Play” button. To power off, press the “Stop” button and hold it for a few seconds until the device turns off.

Playback Controls:

Use the following buttons to control playback:

- **“Play”:** Starts playing the selected media.
- **“Stop”:** Stops playback.
- **“Pause”:** Pauses the playback. Press again to resume.
- **“Open/Close”:** Opens or closes the disc tray.
- **“Eject”:** Ejects the disc from the device.

Navigation Controls:

Use the directional buttons “Left,” “Right,” “Up,” and “Down” to navigate through menus and options.

Numeric Keypad:

The numeric keypad allows you to directly access specific tracks or channels. Enter the desired number and press “Play” or “OK” to confirm.

Additional Functions:

The remote control may have additional buttons for specific functions such as “Repeat,” “Random Play,” “Clear,” “Check,” “PGM,” “Guide,” “Pre Ch,” “Exit,” “Smart,” “Sleep,” “AV,” and more. Please consult the user manual of your specific device for detailed information on these functions.

Frequently Asked Questions (FAQ)

• Q1: How do I replace the batteries in the remote control?

A1: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and insert two AAA batteries, ensuring the correct polarity. Close the compartment securely.

• Q2: Is this remote control compatible with all Pioneer devices?

A2: The CU-PD055 remote control is designed to be compatible with a wide range of Pioneer audio/video devices. However, it is always recommended to check the compatibility list or consult the user manual of your specific device to ensure compatibility.

Remote Control Function



PIONEER
OPEN/CLOSE
INDEX REPEAT RANDOM PLAY
MANUAL PAUSE STOP
TRACK PLAY
1 2 3 +10
4 5 6 EJECT
7 8 9 10
MANDIS
P.M. CHECK CLEAR TIME
COMPACT DISC PLAYER
REMOTE CONTROL UNIT
CU-PD055

	Original	Replacement		Original	Replacement
	Open/Close	 Eject		6	 6
	Play	 Play		7	 7
	Stop	 Stop		8	 8
	Pause	 Pause		9	 9
	Repeat	 Text		10	 0
	Random Play	 TV/R		+10	 Guide
	Manual >>	 >>		≥20	 Pre Ch
	<< Manual	 <<		Clear	 Exit
	I<< Track	 I<<		Check	 Smart
	Track >>I	 >>I		PGM	 Sleep
	< Index	 Left		Time	 AV
	Index >	 Right			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			



POWER MUTE SHIFT
TV DVD SAT AUX
PLAY MODE
PLAY PAUSE STOP
DISC MENU SOUND AB- SETTINGS
LIST DUAL SUBT OPT
PROG SEARCH PICTURE ECO
SLEEP TV/R FORM 3D
E-MANUAL REPEAT ZOOM TIMER
D-MENU TEXT
TOP MENU INFO
MENU OK DISPLAY
CLEAR EXIT RETURN BACK
HOLD
+ VOL SMART +
- MEDIA AFF CH
-
1 2 3
4 5 6
7 8 9
GUIDE 0 PRE-CH
A B C D
MANDIS
shop
www.mandis.tv

Documents / Resources



[Mandis CU-PD055 Replacement Remote Control](#) [pdf] Instruction Manual
PWW1058, CU-PD055, CU-PD055 Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for PIONEER CU-PD055 \(PWW1058\)](#)
- [User Manual](#)