



Mandis CYB001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CYB001 Remote Control Instructions 

Contents

- [1 Mandis CYB001 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Specifications](#)
- [5 Frequently Asked Questions](#)
- [6 Using Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis CYB001 Remote Control



Product Information

- The product is a remote control for the CYB001 model of the Cyberhome device.
- It is used to control various functions and features of the device.
- The remote control has multiple buttons with different functions such as power, setup, menu navigation, audio control, subtitle control, play, stop, zoom, and more.
- It is designed to provide a convenient and user-friendly way of operating the Cyberhome device.

Product Usage Instructions

Power and Setup

- To turn on the device, press the “Power” button. To access the setup options, press the “Setup” button.

Menu Navigation

- Use the directional buttons (Up, Down, Left, Right) to navigate through the menu options. Press the “Enter” button to select an option.

Display and Audio Control

- The “Display” button is used to toggle the display options. The “Audio” button is used to control the audio settings. Use the directional buttons to adjust the settings.

Subtitle and Angle Control

- Press the “Subtitle” button to toggle subtitles on or off. The “Angle” button is used to change the viewing angle if available.

Play and Stop

- Use the “Play” button to start playing a media file. Press the “Stop” button to stop playback.

Zoom and Repeat

- The “Zoom” button is used to zoom in or out on the screen. The “Repeat” button allows you to repeat a specific section or the entire media file.

Additional Functions

- The remote control also has additional buttons such as “Mute” for muting the audio, “Goto” for jumping to a specific time or chapter, and “Info” for displaying information about the media file.


Specifications

- **Model:** CYB001
- **Compatibility:** Cyberhome devices
- **Colour:** Black
- **Dimensions:** [Insert dimensions]
- **Weight:** [Insert weight]

Frequently Asked Questions

- **Q:** How do I change the language settings?⁴
- **A:** Press the “Audio/Lang” button to cycle through the available language options. Use the directional buttons to select the desired language and press “Enter” to confirm.
- **Q:** How do I bookmark a specific section of a media file?
- **A:** While playing the media file, press the “Bookmark” button in the desired section. To return to the bookmarked section later, press the “Return” button followed by the corresponding bookmark number.
- **Q:** How do I access online streaming services like YouTube or Prime Video?
- **A:** Press the corresponding coloured buttons on the remote control (e.g., “Yellow” for YouTube, “Blue” for Prime Video) to launch the respective applications on your Cyberhome device.

Using Instructions

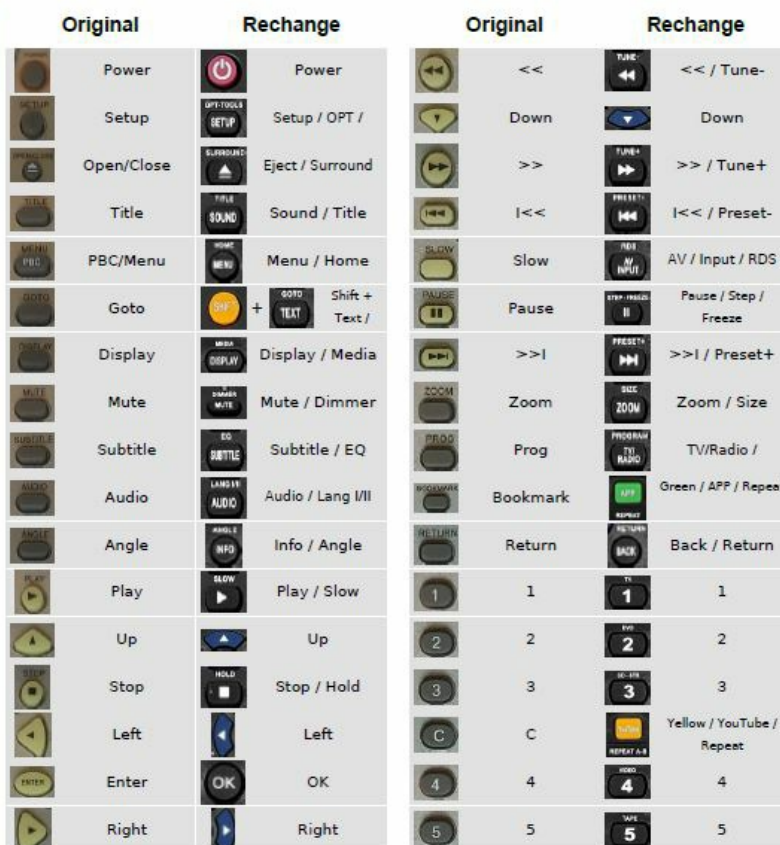

Documents / Resources

	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001, CYB001 Remote Control, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001, CYB001 Remote Control, Remote Control, Control
	Mandis CYB001 Remote Control [pdf] Instructions CYB001 Remote Control, CYB001, Remote Control, Control

References

- [M Télécommandes pour tous les appareils](#)
- [M Télécommande qui remplace CYBERHOME CYB001](#)
- [User Manual](#)