



Mandis CYB001 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CYB001 Replacement Remote Control Instructions 



Contents

- [1 CYB001 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

CYB001 Replacement Remote Control



[CYB001](#)



Original	Rechange	Original	Rechange
	Power		Power
	Setup		Setup / OPT /
	Open/Close		Eject / Surround
	Title		Sound / Title
	PBC/Menu		Menu / Home
	Goto		Shift + Text /
	Display		Display / Media
	Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang / I/I
	Angle		Info / Angle
	Play		Play / Slow
	Up		Up
	Stop		Stop / Hold
	Left		Left
	Enter		OK
	Right		Right



Original	Rechange	Original	Rechange
	6		6
	+10		Guide / EPG / -/-
	7		7
	8		8
	9		9
	0		0
	Repeat 1/All		Text / Goto
	Repeat A-B		Shift + Yellow / YouTube /
	Effect		Smart / List
	Intro		Blue / Prime Video / Random



<https://tout-telecommandes.fr/fr/CYBERHOME/1067347-81909-telecommande-de-remplacement-pour-CYBERHOME-CYB001.html>



Documents / Resources



[Mandis CYB001 Replacement Remote Control](#) [pdf] Instructions

CYB001 Replacement Remote Control, CYB001, Replacement Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace CYBERHOME CYB001](#)
- [User Manual](#)