



Mandis CYBERHOME CYB001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis CYBERHOME CYB001 Remote Control Instructions 

Mandis CYBERHOME CYB001 Remote Control

 


 
Contents

- [1 Remote Control Instructions](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Control Instructions

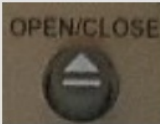

Original	Rechange
 Power	 Power
 Setup	 Setup / OPT /
 Open/Close	 Eject / Surround

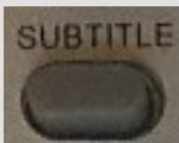	Title		Sound / Title
	PBC/Menu		Menu / Home
	Goto	 + 	Shift + Text /
	Display		Display / Media
	Mute		Mute / Dimmer
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Play		Play / Slow

	Up		Up
	Stop		Stop / Hold
	Left		Left
	Enter		OK
	Right		Right

Original	Rechange
----------	----------



<<



Down



>>



<< / Tune-



Down



>> / Tune+



|<<



 
Slow



Pause



|<< / Preset-

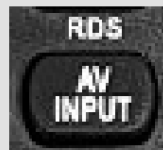

AV / Input / RDS



Pause / Step /
Freeze



>>|



Zoom



Prog



>>| / Preset+



Zoom / Size



TV/Radio /



Bookmark



Return



1



Green / APP / Repeat



Back / Return



1



2



3



C



2



3



Yellow / YouTube /
Repeat



4



5



 
4



5



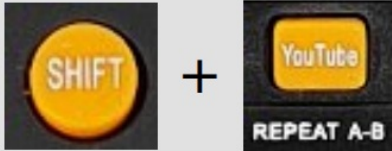

Original	Recharge
 6	 6
 +10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat 1/All	 Text / Goto
 Repeat A-B	 Shift + Yellow / YouTube /
 Effect	 Smart / List
 Intro	 Blue / Prime Video / Random



Customer Support

[CYB001](#)

<https://tout-telecommandes.fr/fr/CYBERHOME/1067347-81909-telecommande-de-remplacement-pour-CYBERHOME-CYB001.html>



Documents / Resources



[Mandis CYBERHOME CYB001 Remote Control](#) [pdf] Instructions
CYB001, CYBERHOME CYB001 Remote Control, CYBERHOME CYB001, Remote Control, Co
ntrol, Remote

References

- [M Télécommande qui remplace CYBERHOME CYB001](#)
- [User Manual](#)