



Mandis DANE-ELEC Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis DANE-ELEC Remote Control Instructions 

Contents

- [1 Mandis DANE-ELEC Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 NAVIGATION BARS](#)
- [6 OVERVIEW](#)
- [7 BUTTON FUNCTIONS](#)
- [8 FAQ's](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



Mandis DANE-ELEC Remote Control Instructions



Product Information

Specifications

- **Product Name:** DANE-ELEC SO-SPEAKY-PVR
- **Model:** Original
- **Replacement Model:** Replacement
- **Power:** 1
- **TV System:** TV/Radio

Product Usage Instructions

- **Power:**
To turn on the device, press the Power button.
- **Tv System:**
To switch between TV and Radio mode, press the Tv System button.
- **Mute:**
To mute the sound, press the Mute button.
- **Rec:**
To start recording or switch recording modes, press the Rec button.
- **Browser:**

To access the Smart List or browse through content, press the Browser button.

- **Timer:**

To set a sleep timer or program a timer for specific actions, press the Timer button.

- **Copy:**

To access the D.Menu or go to the Top menu, press the Copy button.

- **Guide:**

To access the Electronic Program Guide (EPG) or switch between different input sources, press the Guide button. Vol- To decrease the volume, press the Vol- button.

- **Up:**

To navigate upwards in menus or increase values, press the Up button.

- **Vol+:**

To increase the volume, press the Vol+ button.

- **Left:**

To navigate left in menus or adjust settings, press the Left button.

- **Enter:**

To confirm selections or enter submenus, press the Enter button.

- **Right:**

To navigate right in menus or adjust settings, press the Right button.

- **Goto:**

To jump to a specific section or go to a specific time during playback, press the Goto button.

- **Slow:**

To play content in slow motion or adjust playback speed, press the Slow button.

- **Option:**

To access additional setup options or tools, press the Option button.

- **Play:**

To start playback or resume paused content, press the Play button.

- **Return:**

To go back to the previous menu or exit submenus, press the Return button.

- **Down:**

To navigate downwards in menus or decrease values, press the Down button.

- **Stop:**

To stop playback or recording, press the Stop button.

- **Pause/Step:**

To pause playback or step through content frame by frame, press the Pause/Step button.

- **Preset+:**

To cycle through preset channels or increase values, press the Preset+ button.

- **Tune+:**

To tune to the next available channel or increase values, press the Tune+ button.

- **Subtitle:**

To enable/disable subtitles or access subtitle options, press the Subtitle button.

- **EQ:**

To adjust audio equalizer settings or access equalizer options, press the EQ button.

- **Display:**

To display additional information or access media-related features, press the Display button.

- **Media:**

To access media playback options or navigate media content, press the Media button.

- **Audio:**

To switch between audio languages or select audio tracks, press the Audio button.

- **Zoom:**

To zoom in or out on the screen or adjust screen size, press the Zoom button.

- **Sleep:**

To set a sleep timer for automatic device shutdown, press the Sleep button.

- **Green:**

To access specific apps or activate repeat mode, press the Green button.

- **OK:**

To confirm selections or perform actions, press the OK button.

NAVIGATION BARS



OVERVIEW



BUTTON FUNCTIONS

DANE-ELEC SO-SPEAKY-PVR

Original

Replacement

	Power		Power
	Tv System		TV/Radio /
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Browser		Smart / List
	Timer		Sleep / Timer
	Copy		D.Menu / Top
	Guide		Guide / EPG / -/--
	Vol-		Vol-
	Up		Up
	Vol+		Vol+
	Left		Left
	Enter	 + 	Shift + OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Text / Goto
	Slow	 + 	Shift + Play /
	Option	 + 	Shift + Setup / OPT / Tools
	Play		Play / Slow
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	<</FR		<< / Tune-
	>>/FF		>> / Tune+
	Subtitle		Subtitle / EQ
	Display		Display / Media
	Audio		Audio / Lang I/II
	Zoom		Zoom / Size
	Time Shift	 + 	Shift + Sleep / Timer
	Repeat		Green / APP / Repeat
	Select		OK
	Confirm	 + 	Shift + Smart / List

FAQ's

How do I turn on the DANE-ELEC SO-SPEAKY-PVR?

Press the Power button to turn on the device.

How do I switch between TV and Radio mode?

Press the TV System button to switch between TV and Radio mode.

How do I mute the sound?

Press the Mute button to mute the sound.

How do I start recording or switch recording modes?

Press the Rec button to start recording or switch recording modes.

How do I access the Smart List or browse through content?

Press the Browser button to access the Smart List or browse through content.

How do I set a sleep timer or program a timer for specific actions?

Press the Timer button to set a sleep timer or program a timer for specific actions.

How do I access the D.Menu or go to the Top menu?

Press the Copy button to access the D.Menu or go to the Top menu.

How do I access the Electronic Program Guide EPG or switch between different input sources?

Press the Guide button to access the Electronic Program Guide EPG or switch between different input sources.

How do I navigate through menus?

Use the Up, Down, Left, and Right buttons to navigate through menus.

How do I adjust the volume?

Press the Vol- button to decrease the volume and the Vol+ button to increase the volume.

How do I confirm selections or enter submenus?

Press the Enter button to confirm selections or enter submenus.

How do I go back to the previous menu or exit submenus?

Press the Return button to go back to the previous menu or exit the submenus.

How do I stop playback or recording?

Press the Stop button to stop playback or recording.

How do I pause playback or step through content frame by frame?

Press the Pause/Step button to pause playback or step through content frame by frame.

How do I cycle through preset channels or tune to the next available channel?

Use the Preset+ button to cycle through preset channels and the Tune+ button to tune to the next available channel.

How do I enable/disable subtitles or access subtitle options?

Press the Subtitle button to enable/disable subtitles or access subtitle options.

How do I adjust audio equalizer settings or access equalizer options?

Press the EQ button to adjust audio equalizer settings or access equalizer options.

How do I display additional information or access media-related features?

Press the Display button to display additional information or access media-related features.

How do I access media playback options or navigate media content?

Press the Media button to access media playback options or navigate media content.

How do I switch between audio languages or select audio tracks?

Press the Audio button to switch between audio languages or select audio tracks.

How do I zoom in or out on the screen or adjust the screen size?

Press the Zoom button to zoom in or out on the screen or adjust the screen size.

How do I access specific apps or activate repeat mode?

Press the Green button to access specific apps or activate repeat mode.

How do I set a sleep timer for automatic device shutdown?

Press the Sleep button to set a sleep timer for automatic device shutdown.

How do I confirm selections or perform actions?

Press the OK button to confirm selections or perform actions.

<https://all-remote-controls.co.uk/en/DANE-ELEC/1059382-23897-replacement-remote-control-for-DANE-ELEC-SO-SPEAKY-PVR-1TB-SoSpeakyPVR1TB.html>

Documents / Resources

	Mandis DANE-ELEC Remote Control [pdf] Instructions DANE-ELEC Remote Control, DANE-ELEC, Remote Control, Control
	Mandis DANE-ELEC Remote Control [pdf] Instructions DANE-ELEC Remote Control, DANE-ELEC, Remote Control, Control

References

- [User Manual](#)