



# Mandis DANE-ELEC SO SPEAKY PVR Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis DANE-ELEC SO SPEAKY PVR Remote Control Instruction Manual 

## Contents

- [1 Mandis DANE-ELEC SO SPEAKY PVR Remote Control](#)
- [2 Product Information](#)
  - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Mandis DANE-ELEC SO SPEAKY PVR Remote Control**



## Product Information

### Specifications

- Product Name: DANE-ELEC SO-SPEAKY-PVR
- Model: Original and Replacement
- Power: 1
- Tv System: TV/Radio

### Product Usage Instructions



Original	Replacement	Original	Replacement
	Power		1
	Tv System		2
	Mute		3
	Rec		4
	Browser		5
	Timer		6
	Copy		7
	Guide		8
	Vol-		9
	Up		0
	Vol+		Goto
	Left		Slow
	Enter		Option
	Right		Play
	Return		Stop
	Down		Pause/Step
	Setup		I<</Prev
			1
			2
			3
			4
			5
			6
			7
			8
			9
			0
			Text / Goto
			Shift + Play /
			Shift + Setup /
			Play / Slow
			Stop / Hold
			Pause / Step / Freeze
			I<< / Preset-



Original	Replacement
	>>I/Next
	<</FR
	>>/FF
	Subtitle
	Display
	Audio
	Zoom
	Time Shift
	Repeat
	Select
	Confirm
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	Subtitle / EQ
	Display / Media
	Audio / Lang I/II
	Zoom / Size
	Shift + Sleep / Timer
	Green / APP / Repeat
	OK
	Shift + Smart / List

## Power

To power on the device, press the power button located on the remote control.

## Tv System

To switch between TV and Radio modes, press the TV/Radio button on the remote control.

## Mute

To mute the audio, press the Mute button on the remote control.

**Rec**

To start recording or access the recording mode, press the Rec/Rec Mode button on the remote control.

**Browser**

To access the smart features or browse through a list, press the Smart/List button on the remote control.

**Timer**

To set a sleep timer or schedule a timer, press the Sleep/Timer button on the remote control.

**Copy**

To access the device menu or go to the top menu, press the D.Menu/Top button on the remote control.

**Guide**

To access the electronic program guide or navigate through channels, press the Guide/EnPuG button on the remote control.

**Vol-**

To decrease the volume, press the Vol- button on the remote control.

**Vol+**

To increase the volume, press the Vol+ button on the remote control.

**Up**

To navigate upwards, press the Up button on the remote control.

**0-9**

To enter numeric values, use the number buttons (0-9) on the remote control.

**Left**

To navigate to the left, press the Left button on the remote control.

**Right**

To navigate to the right, press the Right button on the remote control.

**Enter**

To confirm a selection or enter a menu, press the Enter button on the remote control.

**Goto**

To go to a specific location or access additional options, press the Goto button on the remote control.

**Slow**

To play content in slow motion or access slow motion options, press the Play/Slow button on the remote control.

**Option**

To access setup options or additional tools, press the Setup/OPT/Tools button on the remote control.

**Return**

To go back or return to a previous screen, press the Return/Back button on the remote control.

**Stop**

To stop playback or pause content, press the Stop/Pause/Step button on the remote control.

**Preset+**

To navigate to the next preset or tune to the next available channel, press the **|>|/Preset+** or **>/>/Tune+** button on the remote control.

**Subtitle**

To enable or disable subtitles, press the **Subtitle/EQ** button on the remote control.

**Display**

To display information or access media options, press the **Display/Media** button on the remote control.

**Audio**

To change the audio language or audio settings, press the **Audio/Lang I/II** button on the remote control.

**Zoom**

To zoom in or out or adjust the screen size, press the **Zoom/Size** button on the remote control.

**Sleep**

To set a sleep timer, press the **Sleep/Timer** button on the remote control.

**Green**

To access specific apps or activate repeat mode, press the **Green/APP/Repeat** button on the remote control.

**OK**

To confirm a selection or perform an action, press the **OK** button on the remote control.

**Product Link**

[Replacement Remote Control for DANE-ELEC SO-SPEAKY-PVR 1TB](#)

**FAQ****Q: How do I power on the DANE-ELEC SO-SPEAKY-PVR?**

**A:** To power on the device, press the power button located on the remote control.

**Q: How do I switch between TV and Radio modes?**

**A:** To switch between TV and Radio modes, press the **TV/Radio** button on the remote control.

**Q: How do I mute the audio?**

**A:** To mute the audio, press the **Mute** button on the remote control.

**Q: How do I start recording or access the recording mode?**

**A:** To start recording or access the recording mode, press the **Rec/Rec Mode** button on the remote control.

**Q: How do I access the smart features or browse through a list?**



**A:** To access the smart features or browse through a list, press the **Smart/List** button on the remote control.

DANE-ELEC SO-SPEAKY-PVR

<https://all-remote-controls.co.uk/en/DANE-ELEC/1059382-23897-replacement-remote-control-for-DANE-ELEC-SO-SPEAKY-PVR-1TB-SoSpeakyPVR1TB.html>

---

## Documents / Resources

	<a href="#">Mandis DANE-ELEC SO SPEAKY PVR Remote Control</a> [pdf] Instruction Manual DANE-ELEC SO SPEAKY PVR Remote Control, DANE-ELEC SO SPEAKY PVR, Remote Control, Control
	<a href="#">Mandis DANE-ELEC SO-SPEAKY-PVR Remote Control</a> [pdf] Instruction Manual DANE-ELEC SO-SPEAKY-PVR Remote Control, DANE-ELEC SO-SPEAKY-PVR, Remote Control, Control

## References

- [User Manual](#)