

# Mandis Dane-Elec So Speaky Pvr Replacement Remote Control Instructions

## Contents

### 1 Dane-Elec So Speaky Pvr Replacement Remote Control

#### 1.1 DANE-ELEC SO-SPEAKY-PVR

### 2 Documents / Resources



 

 

 
 








 

 

 

 



 

 





 




 
 

 







 

 
 
 













#### 2.1 References

## Dane-Elec So Speaky Pvr Replacement Remote Control



### DANE-ELEC SO-SPEAKY-PVR



| Original  |           | Replacement   |                   | Original  |            | Replacement   |                             |
|---|-----------|---|-------------------|---|------------|---|-----------------------------|
|  | Power     |  | Power             |  | 1          |  | 1                           |
|  | Tv System |  | TV/Radio /        |  | 2          |  | 2                           |
|  | Mute      |  | Mute / Dimmer     |  | 3          |  | 3                           |
|  | Rec       |  | Rec / Rec Mode    |  | 4          |  | 4                           |
|  | Browser   |  | Smart / List      |  | 5          |  | 5                           |
|  | Timer     |  | Sleep / Timer     |  | 6          |  | 6                           |
|  | Copy      |  | D.Menu / Top      |  | 7          |  | 7                           |
|  | Guide     |  | Guide / EPG / +/- |  | 8          |  | 8                           |
|  | Vol-      |  | Vol-              |  | 9          |  | 9                           |
|  | Up        |  | Up                |  | 0          |  | 0                           |
|  | Vol+      |  | Vol+              |  | Goto       |  | Text / Goto                 |
|  | Left      |  | Left              |  | Goto       |  | Text / Goto                 |
|  | Enter     |  | Shift + OK        |  | Option     |  | Shift + Setup / OPT / Tools |
|  | Right     |  | Right             |  | Play       |  | Play / Slow                 |
|  | Return    |  | Back / Return     |  | Stop       |  | Stop / Hold                 |
|  | Down      |  | Down              |  | Pause/Stop |  | Pause / Step / Freeze       |
|  | Setup     |  | Setup / OPT /     |  | I<</Prev   |  | I<< / Preset-               |



<https://all-remote-controls.co.uk/en/DANE-ELEC/1059382-23897-replacement-remote-control-for-DANE-ELEC-SO-SPEAKY-PVR-1TB-SoSpeakyPVR1TB.html>



**[Mandis Dane-Elec So Speaky Pvr Replacement Remote Control](#)** [pdf] Instructions  
 Dane-Elec So Speaky Pvr Replacement Remote Control, Dane-Elec So Speaky Pvr, Replacement Remote Control, Remote Control

- User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.