



Mandis DIG001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis DIG001 Remote Control Instructions 



DIG001-SAT ()

Contents

- [1 DIG001 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

DIG001 Remote Control



Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-/X/Prefe		Guide / EPG / -/-
	0		0
	->/Salir/AV		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right

Original		Rechange	
	Down		Down
	Guia		Shift + Guide / EPG / -/-
	Piloto		Display / Media
	Serv		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E		Setup / OPT /
	Mute		Mute / Dimmer
	+/Info		Info / Angle
	Perso		Text / Goto
	Tv/Sat		TV/Radio /



DIG001-TV ()



Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-/X/Prefe		Guide / EPG / -/-
	0		0
	->/Salir/AV		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	ZAP+		CH+ / Page+
	Left		Left

Original		Rechange	
	Right		Right
	Vol-		Vol-
	Down		Down
	ZAP-		CH- / Page-
	Menu		Menu / Home
	Guia		Shift + Guide / EPG / -/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	E		Setup / OPT /
	Mute		Mute / Dimmer



<https://tout-telecommandes.fr/fr/1066590-81848-telecommande-de-remplacement-pour-DIG001.html>

Documents / Resources



[Mandis DIG001 Remote Control](#) [pdf] Instructions
DIG001 Remote Control, DIG001, Remote Control, Control

References

- [M Télécommande qui remplace DIG001](#)
- [User Manual](#)