



Mandis DIGITAL-DYNAMIC DVP 1000 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis DIGITAL-DYNAMIC DVP 1000 Remote Control Instruction Manual 

Contents

- [1 Mandis DIGITAL-DYNAMIC DVP 1000 Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Subtitles and Audio](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis DIGITAL-DYNAMIC DVP 1000 Remote Control



Product Information

The DIGITAL-DYNAMIC DVP 1000 is a digital dynamic multimedia player designed for home entertainment. It allows you to play various media formats including DVDs, CDs, and USB devices. With its user-friendly interface and remote control, you can easily navigate through menus, control playback, and access different features.

Specifications

- Model: DIGITAL-DYNAMIC DVP 1000
- Supported Media Formats: DVD, CD, USB
- Remote Control: Yes
- Interface: Power Menu, Title Open/Close, AV/Input/RDS, Guide/EPG, Marker/PC Display/Media, Subtitle Slow, Program USB
- Audio Mute, Repeat Setup, Up/Zoom Play/Pause Left/Enter Right Stop
- SRC Down, Pause/Step/Freeze, TV/Radio/Picture/Audio/Language
- Mute/Dimmer Green/APP/Yellow/YouTube/Text/Goto Play/Slow Left OK
- Right Stop/Hold Back/Return Down, Vol/Vol+ I/I / Tune+ / Preset+

Product Usage Instructions



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Subtitle		Subtitle / EQ
	Menu PBC		Menu / Home		Slow		Pause / Step / Freeze
	Title		Sound / Title		Program		TV/Radio /
	Open / Close		AV / Input / RDS		USB		Picture / Format
	1		1		Audio		Audio / Lang I/II
	2		2		Mute		Mute / Dimmer
	3		3		Repeat		Green / APP / Repeat
	4		4		Setup		Yellow / YouTube / Repeat
	5		5		Up		Up
	6		6		Zoom		Text / Goto
	7		7		Play / Pause		Play / Slow
	8		8		Left		Left
	9		9		Enter		OK
	10/0		0		Right		Right
	10+		Guide / EPG / -/--		Stop		Stop / Hold
	Clear		Fav / Marker / PC		SRC		Back / Return
	Display		Display / Media		Down		Down

Powering On/Off

To power on the DIGITAL-DYNAMIC DVP 1000, press the Power button on the remote control or the device itself. To power off, press and hold the Power button until the device shuts down.

Playing a DVD or CD

To play a DVD or CD, follow these steps:

[illegible]

1. Press the Power Menu button to access the main menu.
2. Use the number buttons (1-10) to select the desired title or track.
3. Press the Play/Pause button to start playback.
4. Use the navigation buttons (Up/Down/Left/Right) to control playback and navigate through menus.
5. Press the Stop button to stop playback.

Playing Media from USB

To play media files from a USB device, follow these steps:

1. Connect the USB device to the USB port on the DIGITAL-DYNAMIC DVP 1000.
2. Press the Power Menu button to access the main menu.
3. Select the Media option using the AV/Input/RDS button.
4. Use the navigation buttons (Up/Down/Left/Right) to select and play the desired media file.

Subtitles and Audio

To enable subtitles or change the audio language, use the Subtitle and Audio buttons on the remote control. Use the navigation buttons (Up/Down/Left/Right) to select the desired subtitle or audio language.

Documents / Resources

	Mandis DIGITAL-DYNAMIC DVP 1000 Remote Control [pdf] Instruction Manual DIGITAL-DYNAMIC DVP 1000 Remote Control, DIGITAL-DYNAMIC DVP 1000, Remote Control , Control
	Mandis DIGITAL DYNAMIC DVP 1000 Remote Control [pdf] Instructions DIGITAL DYNAMIC DVP 1000 Remote Control, DIGITAL DYNAMIC DVP 1000, Remote Control , Control
	Mandis DIGITAL DYNAMIC DVP 1000 Remote Control [pdf] Instructions DVP1000, DIGITAL DYNAMIC DVP 1000 Remote Control, DIGITAL DYNAMIC DVP 1000, Remote Control, Control, Remote

References

-  [Telecomando sostituto di DIGITAL DYNAMIC DVP1000](#)
- [User Manual](#)