



Mandis DSI810 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis DSI810 Replacement Remote Control Instructions 

Mandis DSI810 Replacement Remote Control Instructions



Contents

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
[1 INSTRUCTION](#)

 
 
 
 
 
[2 Documents /
Resources](#)

 
 
 
 
[2.1 References](#)

 
 
 
 
 
INSTRUCTION

Original	Replacement
----------	-------------

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	FAV		Pre Ch

	Menu		Menu
	EPG		Guide
	i		Info
	Back		Back
	VOD		Smart
	Vol+		Vol +
	Vol-		Vol –
	CH+		Ch +
	CH-		Ch –
	Up		Up
	Down		Down
	Right		Right
	Left Left		Left

	OK		Ok
	PVR		Media
	Red		Red
	Green		Green
	Yellow/Lang		Yellow
	Blue		Blue
	?		Options
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	TV		TV/R

	Radio		TV/R
	Messages		Subt
	Search		Shift + TV/R
	..l		Dual

Mandis shop

Documents / Resources

	Mandis DSI810 Replacement Remote Control [pdf] Instructions DSI810 Replacement Remote Control, DSI810, Replacement Remote Control, Remote Control, Control
---	---

References

- [User Manual](#)