



Mandis DSR3231T Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis DSR3231T Remote Control Instructions 



Contents

- [1 DSR3231T Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

DSR3231T Remote Control



Originale	Sostituto
	Power
	Input
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide
	Infos
	Vol +
	Mute
	Prog +

Originale	Sostituto
	Vol -
	Format
	Prog -
	Red
	Green
	Yellow
	Blue
	Menu
	Media
	Up
	Left
	OK
	Right
	Back
	Down
	Exit
	AD



Originale	Sostituto
	Subtitles
	Text
	Radio
	I<<
	<<
	>>
	>>I
	Rec
	Stop
	Play
	Pause

Originale	Sostituto
	Subtitle / EQ
	Text / Goto
	TV/Radio /
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>>I / Preset+
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze



<https://tutti-i-telecomandi.it/it/1058674-84977-telecomando-di-sostituzione-per-DSR3231T.html>



[Mandis DSR3231T Remote Control](#) [pdf] Instructions
DSR3231T Remote Control, DSR3231T, Remote Control, Control

References

- [M Telecomando sostituto di DSR3231T](#)
- [User Manual](#)