



Mandis DSR3231T Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis DSR3231T Replacement Remote Control Instruction Manual 

Contents

- [1 Mandis DSR3231T Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 FAQ \(Frequently Asked Questions\)](#)
- [6 Remote Using Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis DSR3231T Replacement Remote Control



Product Information

The DSR3231T is a remote control designed for use with a specific device. It is available as both an original and a replacement remote control. The original remote control features a power input button, numeric keypad, volume control, program navigation buttons, color buttons, menu navigation buttons, and additional function buttons. The replacement remote control is designed to have similar functionality to the original remote control. It also features a power button, numeric keypad, volume control, program navigation buttons, color buttons, menu navigation buttons, and additional function buttons.

Specifications

- **Model:** DSR3231T
- **Compatibility:** Compatible with specific device
- **Power Input:** Available on both original and replacement remote control
- **Color Buttons:** Red, Green, Yellow, Blue
- **Menu Navigation Buttons:** Menu, Up, Left, OK, Right, Back, Down, Exit
- **Additional Function Buttons:** Audio/Lang I/II (Original), Subtitle/EQ Text/Goto (Replacement)

Product Usage Instructions

Power Control

To turn the device on or off:

1. Locate the power button on the remote control.
2. Press the power button to toggle the power state of the device.

Volume Control

To adjust the volume:

1. Locate the volume control buttons on the remote control.
2. Press the “+” button to increase the volume.
3. Press the “-” button to decrease the volume.

Program Navigation

To navigate through programs:

1. Locate the program navigation buttons on the remote control.
2. Use the “+” or “-” buttons to scroll through available programs.

Color Buttons

The color buttons on the remote control have different functions depending on the device and application being used. Please refer to the device’s user manual for specific information on the functionality of the color buttons.

Menu Navigation

To navigate through menus:

1. Locate the menu navigation buttons on the remote control.
2. Use the directional buttons (Up, Down, Left, Right) to navigate through menu options.
3. Press the OK button to select a menu option.
4. Press the Back or Exit button to return to previous menus or exit the current menu.

Additional Function Buttons

The additional function buttons on the remote control provide access to specific features or settings. These buttons may vary between the original and replacement remote control. Please refer to the device’s user manual or the replacement remote control’s documentation for detailed information on the functionality of these buttons.

FAQ (Frequently Asked Questions)

Q: Where can I purchase the replacement remote control?

A: The replacement remote control can be purchased from the following website: <https://tutti-i-telecomandi.it/it/1058674-84977-telecomando-di-sostituzione-per-DSR3231T.html>

Q: Is the replacement remote control compatible with other devices?

A: The replacement remote control is designed for use with the specific device mentioned in the product information. It may not be compatible with other devices. Please ensure compatibility before making a purchase.

Q: How do I access subtitles or audio language options?

Remote Using Instruction

[illegible]

Documents / Resources



[Mandis DSR3231T Replacement Remote Control](#) [pdf] Instruction Manual
DSR3231T, DSR3231T Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di DSR3231T](#)
- [User Manual](#)