




Mandis Ener001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Ener001 Remote Control Instructions 

Contents

- [1 Mandis Ener001 Remote Control Instructions](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 REMOTE FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis Ener001 Remote Control Instructions



Specifications

- Model: Ener001
- Compatible with: Original remote control
- Dimensions: N/A
- Weight: N/A
- Color: N/A
- Material: N/A

Product Usage Instructions

Getting Started

To use the Ener001 replacement remote control, please follow the steps below:

1. Remove the old batteries from the original remote control.
2. Insert new batteries (not included) into the Ener001 replacement remote control, ensuring correct polarity.
3. Aim the replacement remote control towards the device you want to control.

Basic Functions

The Ener001 replacement remote control provides various basic functions:

Button	Function
Power	Turns the device on or off
Mute	Mutes or unmutes the device's audio
Volume+	Increases the volume
Volume-	Decreases the volume
Channel+	Selects the next channel
Channel-	Selects the previous channel
Menu	Opens the device's menu
OK	Confirms a selection or enters a sub-menu
Exit	Exits the current menu or cancels an action

Additional Functions

In addition to the basic functions, the Ener001 replacement remote control also provides additional features:

Button	Function
Subtitle	Enables or disables subtitles
Audio	Changes the audio language or audio settings
Guide / EPG	Opens the electronic program guide
Text / Goto	Displays teletext or jumps to a specific location
Home	Brings you back to the home screen
Recall	Returns to the previously viewed channel or input
Pause / Step / Freeze	Pauses playback or steps through frames (if supported)
Stop / Hold	Stops playback or holds a freeze frame

FAQ

How do I replace the batteries in the Ener001 replacement remote control?

To replace the batteries, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover off and remove the old batteries.
3. Insert new batteries, ensuring correct polarity.
4. Slide the battery cover back into place.

Can I use the Ener001 replacement remote control with multiple devices?

The Ener001 replacement remote control is designed to work with a specific device. It may not be compatible with other devices.

Where can I purchase the Ener001 replacement remote control?


You can purchase the Ener001 replacement remote control from the following website: [Ener001 Replacement Remote Control](#).

OVERVIEW



REPLACEMENT PARTS

Original		Replacement	
	Standby		Power
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Favourite		Fav / Marker / PC


	Down / CH-		CH- / Page-
	Down / CH-		Down
	TV/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Rev		<< / Tune-
	Fwd		>> / Tune+
	Prev		I<< / Preset-
	Next		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Repeat		Shift + Green / APP /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

REMOTE FUNCTIONS



<https://all-remote-controls.co.uk/en/1066201-78115-replacement-remote-control-for-Ener001.html>

Documents / Resources

	<p>Mandis Ener001 Remote Control [pdf] Instructions Ener001 Remote Control, Ener001, Remote Control, Control</p>
---	--

References

- [M Replacement remote control for Ener001](#)
- [User Manual](#)

