



Mandis GA771WJSA Sharp Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis GA771WJSA Sharp Remote Control Instructions 

Contents

- [1 Mandis GA771WJSA Sharp Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis

Mandis GA771WJSA Sharp Remote Control



Product Information

Specifications

- **Model:** Sharp GA771WJSA
- **Compatibility:** Sharp TVs
- **Replacement Model:** [GA771WJSA](#)

Product Usage Instructions

- **Power and Channel Control**

To turn on the TV, press the **Power** button. To change channels, use the number buttons (1-9, 0) or the **Pre Ch** button to switch between the previously watched channel and the current channel.

- **Audio and Video Control**

Use the **Vol+** and **Vol-** buttons to adjust the volume. Press the **Vol Mute** button to mute the sound. To switch between audio/video sources, press the **AV** button.

- **Menu Navigation**

Navigate through menus using the arrow buttons (**Up**, **Down**, **Right**, **Left**) and confirm selections with the **OK** button. Access the main menu by pressing the **Eco Menu** button.

- **Sleep Timer**

To set a sleep timer, press the **Sleep** button and use the arrow buttons to select the desired time. Press **OK** to confirm.

- **Subtitle and Options**

To enable subtitles, press the **Subt** button. Use the **Shift** button in combination with the **Subt** button to access additional subtitle options. Press the **Options** button to access additional settings and features.

Frequently Asked Questions (FAQ)

- **Q: What is the model of this remote control?**
A: The model of this remote control is Sharp GA771WJSA.
- **Q: Can I use this remote control with any TV?**
A: No, this remote control is specifically designed for Sharp TVs.

Sharp GA771WJSA

Instructions



Originale		Sostituto		Originale		Sostituto	
	Power		Power		▼/O/M/I/II+II		Dual
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Mute		Mute
	4		4		P+		Ch +
	5		5		P-		Ch -
	6		6		P.Info		Info
	7		7		[i+]		List
	8		8		AV Mode		Format
	9		9		[<>]		Eject
	0		0		Eco		3D
	Recall		Pre Ch		Menu		Menu
	Source		AV		Up		Up
	ATV		Shift + Smart		Down		Down
	DTV		Smart		Right		Right
	EPG		Guide		Left		Left
	Radio		TV/R		OK		Ok





Originale	Sostituto
	Exit
	Back
	Red
	Green
	Yellow
	Blue
	Text
	Shift + Subt
	Subt
	Shift + Options
	Shift + Dual
	Shift + TV/R
	Sleep
	Shift + Power
	Play

Originale	Sostituto
	Options
	Rec
	Shift + Stop
	Stop



<https://tutti-i-telecomandi.it/it/Sharp/1055079-30416-telecomando-di-sostituzione-per-Sharp-GA771WJSA.html>

Documents / Resources

	Mandis GA771WJSA Sharp Remote Control [pdf] Instructions GA771WJSA Sharp Remote Control, GA771WJSA, Sharp Remote Control, Remote Control, C ontrol
--	---

References

- [M Telecomando sostituto di SHARP GA771WJSA](#)
- [User Manual](#)