



Mandis GA771WJSA Sharp Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis GA771WJSA Sharp Remote Control Instructions 

Mandis GA771WJSA Sharp Remote Control



=



Contents

- 1 [Product Overview](#)
- 2 [Buttons Descriptions](#)
- 3 [Customers Support](#)
- 4 [Documents / Resources](#)
- 4.1 [References](#)

 
 
 
 
 
Product Overview

 
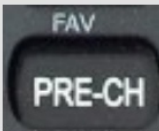
 


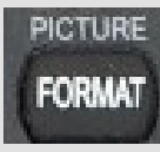


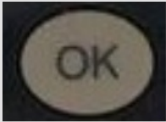
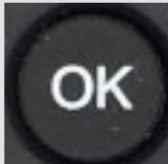
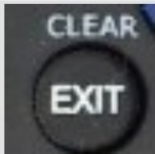
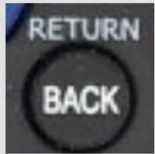
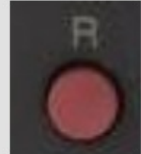
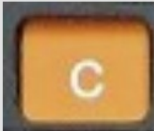
Buttons Descriptions

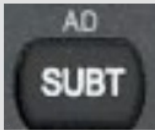
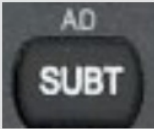
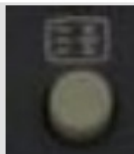
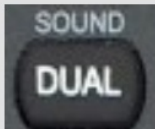
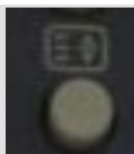
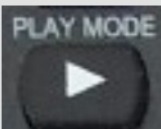
Original	Sostenuto
----------	-----------

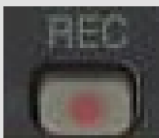
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

 9	 9
 0	 0
 Recall	 PRE-CHPre Ch
 Source	 TIMER AVAV
 ATV	 SHIFT+  HOME SMARTShift + Smart
 DTV	 HOME SMARTSmart
 EPG	 - / -- GUIDEGuide
 RADIO	 SEARCH TV/RTV/R
 VCD I/II/I+II▼/O)/I/II/I+II	 SOUND DUALDual
 Vol+	 + VOLVol +
 Vol-	 VOL —Vol -

	Mute		Mute
	P+		Ch +
	P-		Ch -
	P.Info		Info
	[i+]		List
	AV Mode		Format
	[<>]		Eject
	Eco		3D
	Menu		Menu

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	End		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

	[≡]		Text
	[≡?]	 + 	Shift + Subt
	[...]		Subt
	[≡+]	 + 	Shift + Options
	[≡o]	 + 	Shift + Dual
	[≡◆]	 + 	Shift + TV/R
	Sleep		Sleep
	Power Aquos Link	 + 	Shift + Power
	<<		<<
	Play		Play
	>>		>>

	Option		Options
	Rec		Rec
	Rec Stop	 + 	Shift + Stop
	Stop		Stop

Customers Support

[Sharp GA771WJSA](#)

<https://tutti-i-telecomandi.it/it/Sharp/1055079-30416-telecomando-di-sostituzione-per-Sharp-GA771WJSA.html>



Documents / Resources

	Mandis GA771WJSA Sharp Remote Control [pdf] Instructions GA771WJSA Sharp Remote Control, GA771WJSA, Sharp Remote Control, Remote Control, Control
---	---

References

-  [Telecomando sostituto di SHARP GA771WJSA](#)
- [User Manual](#)