



Mandis GA771WJSA Sharp Replacement Remote Control Owner's Manual

[Home](#) » [Mandis](#) » Mandis GA771WJSA Sharp Replacement Remote Control Owner's Manual 

Contents

- [1 Mandis GA771WJSA Sharp Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instruction](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis GA771WJSA Sharp Replacement Remote Control



Product Information

Specifications

- Brand: Sharp
- Model: GA771WJSA
- Compatibility: Sharp TVs
- Replacement for: Originale remote control
- Color: Black

Product Usage Instructions

- **Power On/Off**

To turn the TV on or off, press the “Power” button.

- **Channel Selection**

To change channels, use the number buttons (1-9, 0) or the “Ch +” and “Ch -” buttons.

- **Volume Control**

To adjust the volume, use the “Vol +” and “Vol -” buttons. Press the “Vol Mute” button to mute/unmute the sound.

- **Input Selection**

To switch between different input sources, press the “AV” button.

- **Smart Features**





Originale		Sostituto		Originale		Sostituto	
	End		Exit		Option		Options
	Back		Back		Rec		Rec
	Red		Red		Rec Stop		Shift + Stop
	Green		Green		Stop		Stop
	Yellow		Yellow				
	Blue		Blue				
	[=]		Text				
	[=?]		Shift + Subt				
	[...]		Subt				
	[=+]		Shift + Options				
	[=o]		Shift + Dual				
	[=♦]		Shift + TV/R				
	Sleep		Sleep				
	Power Aquos Link		Shift + Power				
	<<		<<				
	Play		Play				
	>>		>>				



<https://tutti-i-telecomandi.it/it/Sharp/1055079-30416-telecomando-di-sostituzione-per-Sharp-GA771WJSA.html>

Documents / Resources

Mandis GA771WJSA Sharp Replacement Remote Control [pdf] Owner's Manual
GA771WJSA Sharp Replacement Remote Control, GA771WJSA, Sharp Replacement Remote Control, Replacement Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di SHARP GA771WJSA](#)
- [User Manual](#)