



Mandis HD5010S Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis HD5010S Replacement Remote Control Instructions 




Contents

- [1 HD5010S Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

HD5010S Replacement Remote Control


[BEL DIGITAL 004728](#)

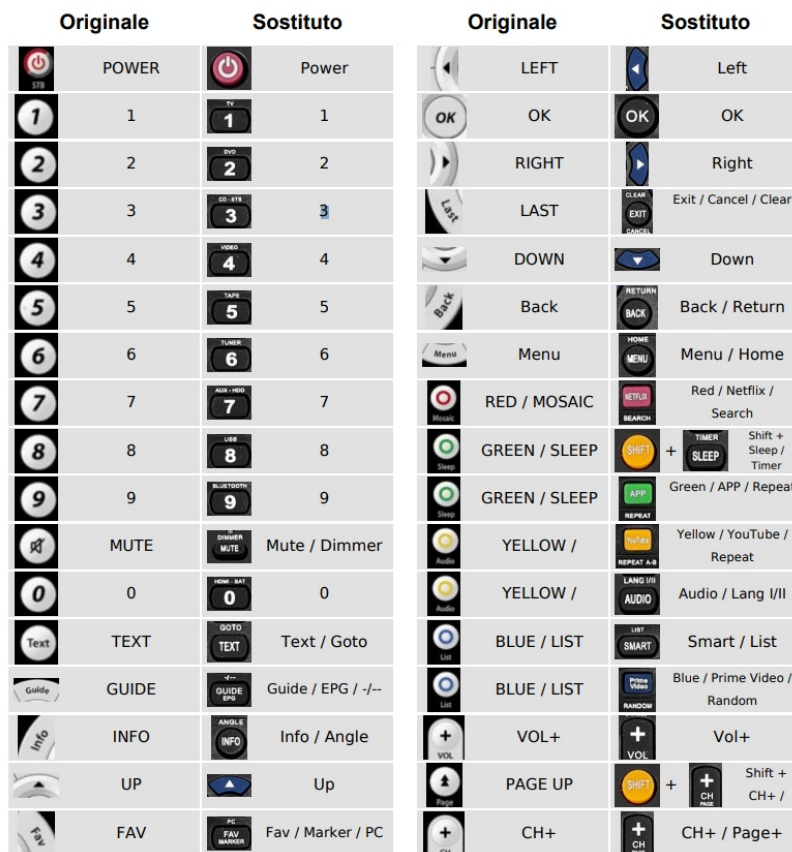

Originale		Sostituto		Originale		Sostituto	
	VOL-		Vol-		ZOOM		Zoom / Size
	PAGE DOWN		+  Shift + CH- /		TV/Radio		D.Menu / Top
	CH-		CH- / Page-				
	REW		<< / Tune-				
	PLAY / PAUSE		Play / Slow				
	PLAY / PAUSE		+  Shift + Pause / Step /				
	STOP		Stop / Hold				
	FWD		>> / Tune+				
	REC		Rec / Rec Mode				
	OPTION		Setup / OPT /				
	MEDIA		Display / Media				
	TIME SHIFT		Eject / Surround				
	Pause		Pause / Step / Freeze				
	PIP		AV / Input / RDS				
	SWAP		+  Shift + AV / Input / RDS				
	TIMER		Sleep / Timer				
	Video FORMAT		Picture / Format				



Documents / Resources

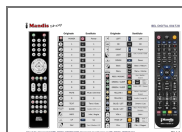

[Mandis HD5010S Replacement Remote Control](#) [pdf] Instructions

HD5010S Replacement Remote Control, HD5010S, Replacement Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di BEL DIGITAL HD5010S](#)
- [User Manual](#)