



Mandis i-LED 24 I-JOY Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis i-LED 24 I-JOY Remote Control Instruction Manual 

Contents

- [1 Mandis i-LED 24 I-JOY Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis i-LED 24 I-JOY Remote Control



Product Information



Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH +		CH+ / Page+
	Mute		Mute / Dimmer		Vol -		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	Vol +		Vol +		Display		Display / Media
	Mute		Mute		PMode		Picture / Format
	Aspect		Aspect		S.Mode		Sound / Title
	Nicam		Nicam		Sleep		Sleep / Timer
	Recall		Recall		FAV		Fav / Marker / PC
	Vol +		Vol +		FAV -		Shift + Down
	Aspect		Aspect				
	Nicam		Nicam				

Specifications

- Product Name: I-LED 24
- Model Number: 1059242-24091
- Replacement Remote Control: Sostituto
- Original Remote Control: Originale
- Website: [Product Website](#)

Product Usage Instructions

The picture and sound controls allow you to adjust the display and audio settings.

- Originale: Picture / Format, Audio / Lang I/II
- Sostituto: Picture / Format, Sound / Title

<https://tutti-i-telecomandi.it/it/i-Joy/1059242-24091-telecomando-di-sostituzione-per-i-Joy-i-LED-24.html>

Documents / Resources

	Mandis i-LED 24 I-JOY Remote Control [pdf] Instruction Manual i-LED 24 I-JOY Remote Control, i-LED 24, I-JOY Remote Control, Remote Control, Control
	Mandis i-LED 24 I-JOY Remote Control [pdf] Instructions i-LED 24 I-JOY Remote Control, i-LED 24, I-JOY Remote Control, Remote Control, Control

References

- [M Telecomando sostituto di I-JOY i-LED 24](#)
- [User Manual](#)