



Mandis IN319PB Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis IN319PB Replacement Remote Control Instructions 

Contents

- [1 Mandis IN319PB Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 REPLACEMENT PARTS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis IN319PB Replacement Remote Control



Product Information

Specifications

- **Brand:** INVES
- **Model:** IN319PB
- **Number of Pages:** 2
- **Product Dimensions:** Not specified
- **Weight:** Not specified

Product Usage Instructions

Power On/Off and Channel Selection

- Press the “Power” button to turn the TV/AV on or off.
- Use the number buttons (1-9, 0) to directly enter a channel number.
- Press the “CH+” or “CH-” buttons to navigate through channels.
- Press the “Recall” button to switch between the current and previous channels.

Volume Control

- Use the “CHVol+” and “Vol-” buttons to adjust the volume level.

- Press the “Mute” button to temporarily mute the sound.

Menu Navigation and Settings

- Press the “Menu” button to access the TV/AV menu.
- Use the arrow buttons (Up, Down, Right, Left) to navigate through menu options.
- Press the “Enter” button to select an option.
- Use the colored buttons (Red, Green, Yellow, Blue) for specific menu functions.

Additional Features

- Press the “Info” button to display additional information about the current program.
- Use the “Sleep” button to set a sleep timer for automatic TV/AV shutdown.
- Press the “Dual” button to switch between TV and Radio modes.
- Use the “Subtitle” button to enable or disable subtitles.

Frequently Asked Questions (FAQ)

- **Q: Where can I find a replacement remote control for the INVES IN319PB?**

A: You can find a replacement remote control for the INVES IN319PB at [this link](#) .

- **Q: How many pages does the user manual have?**

A: The user manual consists of 2 pages.

REPLACEMENT PARTS



Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep
	Tv/AV		AV		Edit		Smart
	1		1		Info		Info
	2		2		Mute		Mute
	3		3		Menu		Menu
	4		4		Still		Media
	5		5		EPG		Guide
	6		6		Red		Red
	7		7		Green		Green
	8		8		Yellow		Yellow
	9		9		Blue		Blue
	0		0		Up		Up
	-/-		Shift + Guide		Down		Down
	Recall		Pre Ch		Right		Right
	P.Mode		Shift + Format		Left		Left
	S.Mode		Shift + Dual		Enter		Ok
	Nicam		Options		CH+		Ch +





Original		Rechange		Original		Rechange	
	CH-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	3D N.R.		3D				
	FAV		Shift + Pre Ch				
	Text		Text				
	Cancel		Exit				
	Index		List				
	Subpage		Eject				
	Hold		Back				
	Size		Format				
	FAV+		Shift + Ch +				
	FAV-		Shift + Ch -				
	Tv/Radio		TV/R				
	Audio		D. Menu				
	Lang		Dual				
	Subtitle		Subt				



<https://tout-telecommandes.fr/fr/INVES/1037849-60695-telecommande-de-remplacement-pour-INVES-IN319PB.html>

Documents / Resources

[Mandis IN319PB Replacement Remote Control](#) [pdf] Instructions

IN319PB Replacement Remote Control, IN319PB, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace INVES IN319PB](#)
- [User Manual](#)