



Mandis IN50 Atoll Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis IN50 Atoll Remote Control Instructions 

Mandis IN50 Atoll Remote Control Instructions



Contents

- [1 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Remote Control

 


Original	Replacement
 Vol+	 Vol+
 Config	 Menu / Home
 Sel+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Sel-	 CH- / Page

 BY-PASS	4
 NUM	 Guide / EPG / -/-
 Disp	 Display / Media
 Power	 Power
 CD	3
 TUNER	6
 TAPE	5
 AUX	7
 DVD	2
 XLR	1
 USB	8
Mode	 Smart / List



Original	Replacement
 VOL+	 VOL+
 CONFIG	 Menu / Home
 SEL+	 CH+ / Page+
 VOL-	 VOL-
 MUTE	 Mute / Dimmer

 SEL-	 CH- / Page
 INPUT	1
 NUM	 Guide / EPG / -/-
 DISP	 Display / Media
 POWER	 Power
 POWER OFF	 Shift + Power
 POWER ON	 Play / Slow
 INPUT CD	3
 INPUT TUNER	6
 INPUT TAPE	5
 INPUT AUX	7
 INPUT DVD	2
MODE	 Smart / List
INPUT AV	 AV / Input / RDS
INPUT VCR	4



Documents / Resources

	Mandis IN50 Atoll Remote Control [pdf] Instructions IN50 Atoll Remote Control, IN50, Atoll Remote Control, Remote Control, Control
---	---

References

- [User Manual](#)