



Mandis IN50 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis IN50 Remote Control Instructions 

Contents

- [1 Mandis IN50 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEY FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis IN50 Remote Control



Product Information

• Specifications

- **Product Name:** Atoll IN50
- **Model Number:** IN50 (Original), 1065651-95968 (Replacement)
- **Power Source:** AC Power
- **Inputs:** CD, TUNER, TAPE, AUX, DVD, XLR, USB

Product Usage Instructions

• Original Remote Control

- The original remote control for the Atoll IN50 has the following buttons:
- Vol+ – Increase volume
- Config – Configuration settings
- Sel+ – Select next option
- VolMute – Mute volume
- Selby-PASS – Select bypass mode
- NUM – Numeric keypad for direct input

• Disp – Display information

- Power – Power on/off

- CD – Select CD input
- TUNER – Select tuner input
- TAPE – Select tape input
- AUX – Select auxiliary input
- DVD – Select DVD input
- XLR – Select XLR input
- USB – Select USB input

- **Replacement Remote Control**

- The replacement remote control for the Atoll IN50 has the following buttons:
- Vol+ – Increase volume
- Menu / Home – Open the menu or go to the home screen
- CH+ / Page+ – Change channel or page
- VolMute / Dimmer – Mute volume or adjust display brightness
- CH- / Page4 – Change channel or go to page 4
- Guide / EPG / -/- – Open TV guide or electronic program guide
- Display / Media – Display information or access media options

- **Power – Power on/off**

- 3, 6, 5, 7, 2, 1, 8 – Numeric keypad for direct input
- Atoll IN80SE (AMP ONLY)
- The Atoll IN80SE is an amplifier-only model of the Atoll range. It does not have its remote control and can be controlled using the remote control of the Atoll IN50.

- **FAQ (Frequently Asked Questions)**

- **Can I use the replacement remote control with the original Atoll IN50?**
 - Yes, the replacement remote control is compatible with the original Atoll IN50.
- **How do I increase the volume using the original remote control?**
 - To increase the volume using the original remote control, press the “Vol+” button.
- **How do I mute the volume using the replacement remote control?**
 - To mute the volume using the replacement remote control, press the “VolMute / Dimmer” button.
- **Can I use the original remote control with the Atoll IN80SE?**
 - No, the original remote control is specifically designed for the Atoll IN50 model and may not work with the Atoll IN80SE.
- **How do I access the menu or home screen using the replacement remote control?**
 - To access the menu or home screen using the replacement remote control, press the “Menu / Home” button.

KEY FUNCTIONS



Original		Replacement	
	Vol+		Vol+
	Config		Menu / Home
	Sel+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Sel-		CH- / Page-
	BY-PASS		4
	NUM		Guide / EPG / +/-
	Disp		Display / Media
	Power		Power
	CD		3
	TUNER		6
	TAPE		5
	AUX		7
	DVD		2
	XLR		1
	USB		8

[illegible]

Original		Replacement		Original		Replacement	
	VOL+		Vol+		MODE		Smart / List
	CONFIG		Menu / Home		INPUT AV		AV / Input / RDS
	SEL+		CH+ / Page+		INPUT VCR		4
	VOL-		Vol-				
	MUTE		Mute / Dimmer				
	SEL-		CH- / Page-				
	INPUT		1				
	NUM		Guide / EPG / -/--				
	DISP		Display / Media				
	POWER		Power				
	POWER OFF		Shift + Power				
	POWER ON		Play / Slow				
	INPUT CD		3				
	INPUT TUNER		6				
	INPUT TAPE		5				
	INPUT AUX		7				
	INPUT DVD		2				

<https://all-remote-controls.co.uk/en/Atoll/1065651-95968-replacement-remote-control-for-Atoll-IN50-ver3.html>.

Documents / Resources



[Mandis IN50 Remote Control](#) [pdf] Instructions

IN50 Remote Control, IN50, Remote Control, Control

References

- [User Manual](#)