



Mandis IN50 Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis IN50 Replacement Remote Control Instruction Manual 

Contents

- [1 Mandis IN50 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis IN50 Replacement Remote Control



Product Information

Specifications

- Product: Atoll IN50 (Original) / Atoll IN50 (Replacement)
- Model: IN50
- Compatibility: Ver3
- Remote Control Type: Replacement
- Remote Control Model: 1065651-95968
- Power Source: AAA batteries (not included)
- Dimensions: N/A

Product Usage Instructions

Original Remote Control

To use the original remote control, follow these steps:

1. Make sure the remote control has fresh batteries installed.
2. Point the remote control towards the device you want to control.
3. Press the desired button for the corresponding function you want to use, such as adjusting volume, changing input source, or powering on/off.

Replacement Remote Control

To use the replacement remote control, follow these steps:

1. Insert AAA batteries into the battery compartment of the remote control.
2. Point the replacement remote control towards the device you want to control.
3. Press the corresponding button for the desired function:
 - **Vol+**: Increase volume
 - **Menu / Home**: Access menu or home screen
 - **CH+ / Page+**: Change channel or page up
 - **Vol-**: Decrease volume
 - **Mute / Dimmer**: Mute audio or adjust screen brightness
 - **CH- / Page-**: Change channel or page down
 - **Guide / EPG / -/—**: Access program guide or EPG (Electronic Program Guide)
 - **Display / Media**: Display information or access media
 - **Power**: Power on/off the device
 - **Shift + Power**: Power off the device completely
 - **Play / Slow**: Play or slow down media playback
4. For specific input selection, use the corresponding input buttons:
 - **INPUT CD**: Select CD input source
 - **INPUT TUNER**: Select tuner input source
 - **INPUT TAPE**: Select tape input source
 - **INPUT AUX**: Select auxiliary input source
 - **INPUT DVD**: Select DVD input source
 - **INPUT AV**: Select AV input source (for Atoll IN80SE model only)
 - **INPUT VCR**: Select VCR input source (for Atoll IN80SE model only)

FAQ

• Can I use the replacement remote control with multiple Atoll models?

No, the replacement remote control is specifically designed for Atoll IN50 (Ver3) model and may not work with other Atoll models.

• What type of batteries does the replacement remote control use?

The replacement remote control uses AAA batteries. Make sure to insert fresh batteries for optimal performance.

• Where can I find the user manual for Atoll IN80SE (AMP ONLY) model?

You can find the user manual for Atoll IN80SE (AMP ONLY) model at the following link: [Atoll IN80SE User Manual](#)

REPLACEMENT PARTS



Original	Replacement	Original	Replacement
	Vol+		Vol+
	Config		Menu / Home
	Sel+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Sel-		CH- / Page-
	BY-PASS		4
	NUM		Guide / EPG / -/--
	Disp		Display / Media
	Power		Power
	CD		3
	TUNER		6
	TAPE		5
	AUX		7
	DVD		2
	XLR		1
	USB		8

Original	Replacement
Mode	Smart / List



Original	Replacement	Original	Replacement
	VOL+		Vol+
	CONFIG		Menu / Home
	SEL+		CH+ / Page+
	VOL-		Vol-
	MUTE		Mute / Dimmer
	SEL-		CH- / Page-
	INPUT		1
	NUM		Guide / EPG / -/--
	DISP		Display / Media
	POWER		Power
	POWER OFF		Shift + Power
	POWER ON		Play / Slow
	INPUT CD		3
	INPUT TUNER		6
	INPUT TAPE		5
	INPUT AUX		7
	INPUT DVD		2

Original	Replacement
MODE	Smart / List
INPUT AV	AV / Input / RDS
INPUT VCR	4



<https://all-remote-controls.co.uk/en/Atoll/1065651-95968-replacement-remote-control-for-Atoll-IN50-ver3.html>

Documents / Resources

	Mandis IN50 Replacement Remote Control [pdf] Instruction Manual IN50 Replacement Remote Control, IN50, Replacement Remote Control, Remote Control, Control
	Mandis IN50 Replacement Remote Control [pdf] Instructions IN50 Replacement Remote Control, IN50, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)