



Mandis IN80SE Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis IN80SE Remote Control Instructions 

Mandis IN80SE Remote Control



Contents

- [1 Remote Control Instruction](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Control Instruction



Original

Replacement

 Vol+	 Vol+
 Config	 Menu / Home
 Sel+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Sel-	 CH- / Page-



BY-PASS



NUM



Disp



4



Guide / EPG / -/--



Display / Media



Power



CD



TUNER



Power



3



6



TAPE



5



AUX



7



DVD



2



XLR



1



USB



8

Mode



Smart / List





Original	Replacement
----------	-------------

	VOL+		Vol+
	CONFIG		Menu / Home
	SEL+		CH+ / Page+
	<u>VOL-</u>		<u>Vol-</u>
	<u>MUTE</u>		<u>Mute / Dimmer</u>
	SEL-		CH- / Page-
	INPUT		1
	NUM		Guide / EPG / -/--
	DISP		Display / Media

	POWER		Power
	POWER OFF	 + 	Shift + Power
	POWER ON		Play / Slow
	INPUT CD		3
	INPUT TUNER		6
	INPUT TAPE		5
	INPUT AUX		7
	INPUT DVD		2


MODE

INPUT AV

INPUT VCR



Smart / List

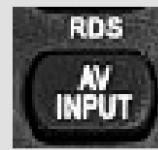

AV / Input / RDS



4



Customer Support

<https://all-remote-controls.co.uk/en/Atoll/1065651-95968-replacement-remote-control-for-Atoll-IN50-ver3.html>



Documents / Resources



[Mandis IN80SE Remote Control](#) [pdf] Instructions
IN80SE Remote Control, IN80SE, Remote Control, Control

References

- [M Replacement remote control for ATOLL IN50 ver3](#)
- [User Manual](#)