



Mandis IR PEEKBOX 40 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis IR PEEKBOX 40 Replacement Remote Control Instructions 

Contents

1

Mandis IR PEEKBOX 40 Replacement Remote Control Instructions

2

INSTRUCTION

3

Documents / Resources

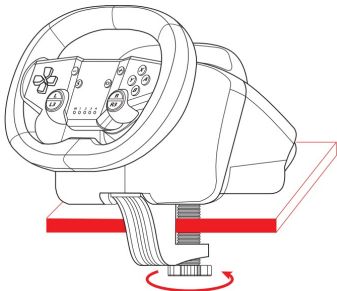 
3.1

References

4

Related Posts

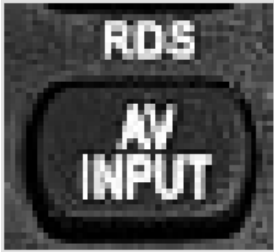 
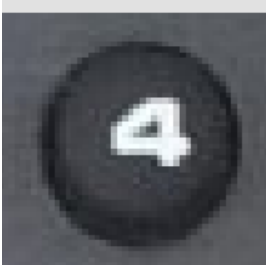 
Mandis IR PEEKBOX 40 Replacement Remote Control Instructions



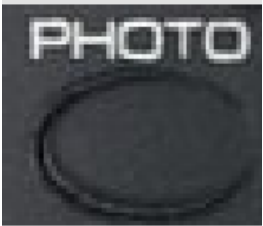 
INSTRUCTION

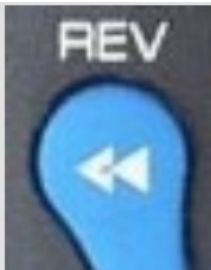 
Original	Recharge
----------	----------

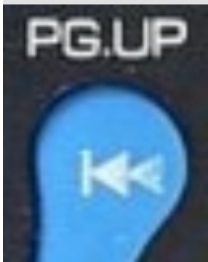 
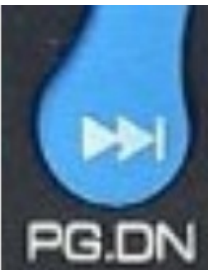 
	Power		Power
	Setup		Setup / OPT /
	Disk		Yellow / YouTube / Repeat
	Disk		Shift + 7
	1		1
	2		2
	3		3

	HDMI/AV		AV / Input / RDS
	HDMI/AV		Blue / Prime Video / Random
	HDMI/AV		Shift + 0
	4		4
	5		5
	6		6
	Mute		Mute / Dimmer

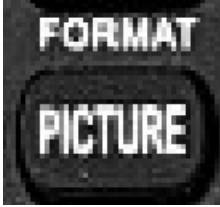 
	7		7
	8		8
	9		9
	Edit		Fav / Marker / PC
	Copy		Guide / EPG / -/--
	Dir		Text / Goto
	0		0

	Movie		Smart / List
	Music		Display / Media
	Photo		Shift + Display / Media
	Vol-		Vol-
	Vol+		Vol+
	Up		Up
	Left		Left

	Ente		OK
	Right		Right
	Down		Down
	Repeat		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Step		Shift + Pause / Step / Freeze
	<</Rev		<< / Tune

	Play		lay / Slow
	I<</PG Up></PGUp		I<< / Preset
	I<</PG Up></PGUp		CH+ / Page+
	>>/FF		>> / Tune+
	Stop		Stop / Hold
	>>I/PG Dn		>>I / Preset+
	>>I/PG Dn		CH- / Page

	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	PSM		D.Menu / Top
	Info		Info / Angle
	Home		Menu / Home
	Exit		Exit / Cancel / Clear

	S.Show		Picture / Format
	DVD		Red / Netflix / Search
	DVD		Shift + 2

<https://touttelecommandes.fr/fr/PEEKTON/105614521404telecommandederemplacementpourPEEKTON-IR-Peekbox40.html>



Documents / Resources

	Mandis IR PEEKBOX 40 Replacement Remote Control [pdf] Instructions IR PEEKBOX 40 Replacement Remote Control, IR PEEKBOX 40, Replacement Remote Control , Remote Control
---	--

References

- [M Télécommande qui remplace PEEKTON IR Peekbox40](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.