

**Mandis IR Peekbox40 Remote Control**



# Mandis IR Peekbox40 Remote Control Instructions

[Home](#) » [Mandis](#) » **Mandis IR Peekbox40 Remote Control Instructions** 

## Contents

- [1 Mandis IR Peekbox40 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control Replacement Function](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

# Mandis

**Mandis IR Peekbox40 Remote Control**



## Product Information

The IR PEEKBOX 40 is a remote control designed for use with PEEKTON devices. It is compatible with various PEEKTON models and can be used to control different functions and settings.

### Specifications:

- **Model:** IR PEEKBOX 40
- **Compatibility:** PEEKTON devices
- **Colour:** Black
- **Dimensions:** 6.5 x 2.5 x 0.5 inches
- **Weight:** 0.1 lbs

## Product Usage Instructions

### • Power On/Off:

To power the device, press the “Power” button. To power off, press and hold the “Power” button for a few seconds until the device turns off.

### • Menu Navigation:

Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options on your PEEKTON device.

### • Selecting Options:

To select an option or confirm a selection, press the “OK” button.

### • Volume Control:

To adjust the volume, use the “Vol+” and “Vol-” buttons. Press the “Mute” button to mute or unmute the audio.

You can also use the “Dimmer” function to adjust the brightness of the display.

- **Media Playback:**

Use the playback controls (Play, Pause, Step, Freeze) to control media playback on your PEEKTON device.  
The “Step” button allows you to step through frames or freeze the current frame during playback.

- **Input Selection:**

Use the “Input” button to switch between different input sources, such as HDMI or AV.

- **Additional Functions:**

The remote control also provides additional functions like accessing the setup menu, adjusting audio settings, changing subtitles, and more. Refer to the user manual of your PEEKTON device for detailed instructions on these functions.

## Remote Control Replacement Function

### IR PEEKBOX 40



Original	Rechange	Original	Rechange
	Power		Edit
	Setup		Copy
	Disk		Dir
	Disk		0
	1		Movie
	2		Music
	3		Photo
	HDMI/AV		Vol-
	HDMI/AV		Vol+
	HDMI/AV		Up
	4		Left
	5		Enter
	6		Right
	Mute		Down
	7		Repeat
	8		Pause
	9		Step
			Fav / Marker / PC
			Guide / EPG / -/-
			Text / Goto
			Smart / List
			Display / Media
			Vol-
			Vol+
			Up
			Left
			Right
			Down
			Green / APP / Repeat
			Pause / Step / Freeze
			Shift + Pause / Step / Freeze





Original	Rechange	Original	Rechange
	<</Rev		<< / Tune-
	Play		Play / Slow
	I<</PG Up		I<< / Preset-
	I<</PG Up		CH+ / Page+
	>>/FF		>> / Tune+
	Stop		Stop / Hold
	>>/PG Dn		>> / Preset+
	>>/PG Dn		CH- / Page-
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	PSM		D.Menu / Top
	Info		Info / Angle
	Home		Menu / Home
	Exit		Exit / Cancel / Clear
	S.Show		Picture / Format
	DVD		Red / Netflix / Search
	DVD		Shift + 2



## FAQ

- Q: How do I replace the batteries in the remote control?**

A: To replace the batteries, open the battery compartment on the back of the remote control. Remove the old batteries and insert new ones, making sure to match the correct polarity. Close the battery compartment securely.

- Q: Can I use this remote control with other brands or models?**

A: The IR PEEKBOX 40 remote control is specifically designed for use with PEEKTON devices and may not be compatible with other brands or models. Please check the compatibility before use.

<https://tout-telecommandes.fr/fr/PEEKTON/1056145-21404-telecommande-de-remplacement-pour-PEEKTON-IR-Peekbox40.html>.

## Documents / Resources

	<p><b>Mandis IR Peekbox40 Remote Control</b> [pdf] Instructions</p> <p>IR Peekbox40 Remote Control, IR Peekbox40, Remote Control, Control</p>
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)