

Mandis IR Peekbox40 Remote Control Replacement



Mandis IR Peekbox40 Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis IR Peekbox40 Remote Control Replacement Instructions 

Contents

- [1 Mandis IR Peekbox40 Remote Control Replacement](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions \(FAQ\)](#)
- [4 Product Information](#)
- [5 Remote Using Instruction](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis IR Peekbox40 Remote Control Replacement



Product Information

The IR PEEKBOX 40 is a remote control designed for use with the PEEKTON IR Peekbox40. It is a versatile remote control that allows you to control various functions of the device.

Specifications

- Model: IR PEEKBOX 40
- Compatibility: PEEKTON IR Peekbox40
- Power Source: 2 AAA batteries (not included)

Product Usage Instructions

Power On/Off

To power on the PEEKTON IR Peekbox40, press the “Power” button. To power off, press and hold the “Power” button for a few seconds.

Navigation and Selection

- Use the arrow buttons (Up, Down, Left, Right) to navigate through menus and options.

- Press the “OK” button to select an option or confirm a selection.

Volume Control

To adjust the volume, use the “Vol+” and “Vol-” buttons.

Mute

To mute the sound, press the “Mute” button. Press it again to unmute.

Media Playback

- Use the “Play/Pause” button to play or pause media playback.
- Press the “Stop” button to stop media playback.
- Use the “Previous” and “Next” buttons to skip to the previous or next track or video.

Menu Navigation

- Press the “Menu” button to access the main menu.
- Use the arrow buttons to navigate through the menu options.
- Press the “OK” button to select an option.
- Press the “Exit” or “Cancel” button to exit the menu or go back to the previous screen.

Additional Functions

- Refer to the user manual for detailed instructions on using additional functions such as setting up the device, accessing specific features, and using external devices.

Frequently Asked Questions (FAQ)

Q: How do I change the language settings?

A: Press the “Menu” button, navigate to the “Settings” option, select “Language”, and choose your preferred language.

Q: How do I access online streaming services like Netflix?

A: Press the “Red” button to access the streaming services menu. Use the arrow buttons to navigate and select the desired service.

Q: How do I adjust the picture format?

A: Press the “Picture/Format” button to cycle through available picture formats. Use the arrow buttons to adjust settings within each format.

Product Information



Remote Using Instruction

Original/ Recharge

	Power		Power
	Setup		Setup / OPT /
	Disk		Yellow / YouTube / Repeat
	Disk		Shift + 7
	1		1
	2		2
	3		3
	HDMI/AV		AV / Input / RDS
	HDMI/AV		Blue / Prime Video / Random
	HDMI/AV		Shift + 0
	4		4
	5		5
	6		6
	Mute		Mute / Dimmer
	7		7
	8		8
	9		9

	Edit		Fav / Marker / PC
	Copy		Guide / EPG / -/--
	Dir		Text / Goto
	0		0
	Movie		Smart / List
	Music		Display / Media
	Photo		Shift + Display / Media
	Vol-		Vol-
	Vol+		Vol+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Repeat		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Step		Shift + Pause / Step / Freeze

	<</Rev		<< / Tune-
	Play		Play / Slow
	I<</PG Up		I<< / Preset-
	I<</PG Up		CH+ / Page+
	>>/FF		>> / Tune+
	Stop		Stop / Hold
	>>/PG Dn		>>I / Preset+
	>>/PG Dn		CH- / Page-
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	PSM		D.Menu / Top
	Info		Info / Angle
	Home		Menu / Home
	Exit		Exit / Cancel / Clear
	S.Show		Picture / Format
	DVD		Red / Netflix / Search
	DVD		Shift + 2

- <https://tout-telecommandes.fr/fr/PEEKTON/1056145-21404-telecommande-de-remplacement-pour-PEEKTON-IR-Peekbox40.html>
-

Documents / Resources

	Mandis IR Peekbox40 Remote Control Replacement [pdf] Instructions IR Peekbox40 Remote Control Replacement, IR Peekbox40, Remote Control Replacement, Control Replacement
---	---

References

- [M Télécommande qui remplace PEEKTON IR Peekbox40](#)
- [User Manual](#)