



Mandis JB007 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis JB007 Remote Control Instructions 

Contents

- [1 Mandis JB007 Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 KEYS FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis JB007 Remote Control



Product Information

- The BWARE JB007 is a remote control designed for use with BWARE devices.
- It is the original remote control for the device, providing all the necessary functions for controlling the device.
- However, if you need a replacement remote control, there is a compatible replacement available.

Specifications

- **Model:** BEWARE JB007
- **Compatibility:** BEWARE devices
- **Original Remote Control:** Yes
- **Replacement Remote Control:** Available

Product Usage Instructions

- **Power and Mute Functions**
 - To power on or off the device, press the “Power” button. To mute or unmute the audio, press the “Mute” button. For devices with a dimmer function, use the “Power Mute / Dimmer” button.
- **Favorite and Channel Navigation**
 - To navigate up or down through channels or menu options, use the “Up” and “Down” buttons. For devices

with a favorite or marker function, use the “Fav / Marker / PC Exit / Cancel / Clear” button. To go to the next or previous page, use the “CH+ / Page+” and “CH- / Page-” buttons.

- **Volume Control**

- To adjust the volume, use the “Vol+” and “Vol-” buttons. For devices with additional audio settings or modes, use the corresponding colored buttons (Red, Green, Yellow, Blue)

- **OK and Navigation Buttons**

- The “OK” button is used to confirm selections or access menus. The “Right” and “Left” buttons are used for navigation. For devices with specific functions assigned to the colored buttons, use them accordingly.

- **Other Functions**














 







- The remote control also provides additional functions such as accessing TV/radio, program guides, media playback, and various applications like Netflix, YouTube, and Prime Video. Refer to the user manual for specific instructions on using these functions.

















 







 
 
 
 
 
 
 
 


- **FAQ**

- **Q:** Where can I find a replacement remote control for BWARE JB007?
- **A:** You can find a compatible replacement remote control for BWARE JB007 at [this link](#).

KEYS FUNCTION




Original		Replacement	
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/R		TV/Radio /
	SAT	 +  Shift + 0	
	SAT		Smart / List
	EPG		Guide / EPG / -/--
	Menu		Menu / Home

Original		Replacement	
	FAV		Fav / Marker / PC
	Exit		Exit / Cancel / Clear
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Red / Audio		Red / Netflix / Search
	Red / Audio		Audio / Lang I/II
	Green / Mode		Green / APP / Repeat
	Yellow / Disp		Yellow / YouTube / Repeat
	Yellow / Disp		Display / Media
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
Page+	+ Shift + CH+ /	Stop / USB	+ Shift + 8
Page-	+ Shift + CH- /	Pause	Pause / Step / Freeze
Recall	Back / Return	Rec	Rec / Rec Mode
F1 /Info	Info / Angle		
F1 /Info	+ Shift + 1		
F2 / SUB	Subtitle / EQ		
F2 / SUB	+ Shift + 2		
F3 / Goto	+ Shift + Text /		
F3 / Goto	+ Shift + 3		
TXT	Text / Goto		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Play	Play / Slow		
Stop / USB	Stop / Hold		
Stop / USB	AV / Input / RDS		

<https://all-remote-controls.co.uk/en/BWARE/1065242-95777-replacement-remote-control-for-BWARE-JB007.html>.

Documents / Resources

	Mandis JB007 Remote Control [pdf] Instructions JB007 Remote Control, JB007, Remote Control, Control
---	--

References

- [Replacement remote control for BWARE JB007](#)
- [User Manual](#)