



Mandis JVC RM-C1244 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis JVC RM-C1244 Replacement Remote Control Instructions 





JVC RM-C1244 Replacement Remote Control

Contents

- [1 JVC RM-C1244 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

JVC RM-C1244 Replacement Remote Control

Original		Replacement	
	Power		Power
	Mute		Mute
	Red / Eject		Red
	Red / Eject		Eject
	Green / Title		Green
	Yellow / DVD		Yellow
	Yellow / DVD		Options
	Blue / A-B		Blue
	<</[≡o]		<<
	>>/[≡?]		>>
	<</[≡+]		<<
	>> /[≡..]		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Angle / [≡i]		Smart
	Return / Text		Text

	Return / Text	 + 	Shift + Back
	Subtitle		Subt
	Display	 + 	Shift + Info
	Menu / Info		Info
	Menu / Info		D. Menu
	Menu		Menu
	Up		Up
	Source		AV
	Left		Left
	OK		Ok
	Right		Right
	EPG		Guide
	Down		Down
	Exit		Exit
	Vol+		Vol +
	FAV		Pre Ch
	CH+		Ch +

	Vol-		Vol -
	REP		Rec
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Dual
	0		0
	Recall / Goto		Back



<https://all-remote-controls.co.uk/en/JVC/1064704-81826-replacement-remote-control-for-JVC-RM-C1244.html>



Documents / Resources

	Mandis JVC RM-C1244 Replacement Remote Control [pdf] Instructions JVC RM-C1244 Replacement Remote Control, JVC RM-C1244, Replacement Remote Control, Remote Control
---	--

References

- [M Replacement remote control for JVC RM-C1244](#)
- [User Manual](#)

