



Mandis JVC RM-SUXF227DAB Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis JVC RM-SUXF227DAB Remote Control Instructions 

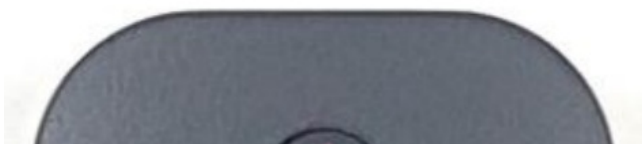 
Mandis JVC RM-SUXF227DAB Remote Control



Contents

- 1 [Product Overview](#)
- 2 [Buttons Descriptions](#)
- 3 [Customers Support](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)

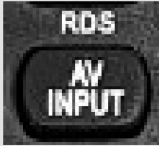 
Product Overview

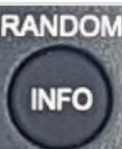 
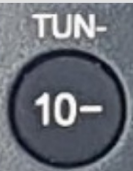 
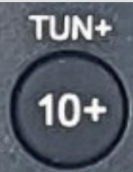 






Buttons Descriptions

Original	Replacement
 Power	 Power
 CD	 3
 Open/Close	 Eject / Surround
 USB	 8
 Source	 AV / Input / RDS
 FM/DAB+	 6
 PRG/Memory	 Setup / OPT /
 Menu/Repeat	 Menu / Home
 <</I<<	 << / Tune-

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+
	Fold-		CH- / Page-
	Fold+		CH+ / Page+
	Info/Random		Info / Angle
	10-/Tun-		Left
	10+/Tun+		Right
	Stop/Auto		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+

	EQ/Clock		Subtitle / EQ
	Mute/Sleep		Mute / Dimmer

Customers Support

[JVC RM-SUXF227DAB](#)

<https://all-remote-controls.co.uk/en/JVC/1066740-96658-replacement-remote-control-for-JVC-RM-SUXF227DAB.html>



Documents / Resources

	Mandis JVC RM-SUXF227DAB Remote Control [pdf] Instructions JVC RM-SUXF227DAB, JVC RM-SUXF227DAB Remote Control, Remote Control, Control
---	---

References

- [M Replacement remote control for JVC RM-SUXF227DAB](#)
- [User Manual](#)