



Mandis JX-2022 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis JX-2022 Replacement Remote Control Instructions 

Contents

- [1 Mandis JX-2022 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis JX-2022 Replacement Remote Control



Product Information

Specifications

- Model: JX-2022
- Power: A-B Clear
- Open/Close Time: Yes
- Resume Prog Audio: Yes
- Subtitle Zoom: Yes
- Recharge: Yes
- 3D: Yes
- Exit: Yes
- Eject: Yes
- AV: Yes
- Info: Yes
- Sleep: Yes
- Dual: Yes
- Subt: Yes
- Shift + Eject: Yes
- Guide TV/R: Yes

- Format Back Text Green Menu Red Vol + Vol Mute Yellow Smart Options
- Up Down Right Left Enter Stop Play I>I N/P > Pause/Step PBC Title
- Media > Pause D. Menu List

Product Usage Instructions

Power On/Off

To power on the device, press the Power button. To power off, press and hold the Power button until the device turns off.

Open/Close Time

This feature allows you to set the time for automatic opening or closing of the device. Refer to the user manual for detailed instructions on how to use this feature.

Resume Prog Audio

This feature enables the device to remember the last program and resume playback from where it was paused. Press the Resume Prog Audio button to activate this feature.

Subtitle Zoom

Use the Subtitle Zoom feature to adjust the size of subtitles on the screen. Press the Subtitle Zoom button repeatedly to cycle through different zoom levels.

Recharge

The device supports rechargeable batteries. To recharge the batteries, connect the device to a power source using the provided charging cable.

3D

The 3D feature allows you to enjoy 3D content on compatible displays. Make sure you have a compatible 3D display and content before using this feature.

Exit

The Exit button is used to exit menus or return to the previous screen.

Eject

Press the Eject button to eject a disc or remove a USB drive from the device.

AV

Use the AV button to switch between different audio/video inputs on the device.

Info

Press the Info button to view detailed information about the current program or media being played.

Sleep

The Sleep feature allows you to set a timer for the device to automatically turn off after a certain period of inactivity. Refer to the user manual for instructions on how to set the sleep timer.

Dual

This button is used for dual audio or language selection. Press the Dual button to switch between different audio tracks or languages.

Subt

The Subt button is used to enable or disable subtitles during playback.

Shift + Eject

Press the Shift + Eject buttons together to perform a specific function. Refer to the user manual for more details.

Guide TV/R

Use the Guide TV/R button to access the TV guide or switch between different TV channels.

Format Back Text Green Menu Red Vol + Vol Mute Yellow Smart Options

These buttons provide various functions for formatting, navigating menus, adjusting volume, muting, and accessing smart options. Refer to the user manual for detailed instructions on using these buttons.

Up Down Right Left Enter Stop Play I>I N/P > Pause/Step PBC Title

These buttons are used for navigation, playback control, and accessing different features. Refer to the user manual for specific instructions on using these buttons.

Media > Pause D. Menu List



 
 
 

 
 

 

 
 
 
 
 
 
 
 


 
 
 
 

 

Use the Media > Pause D. Menu List button to pause media playback, access the device menu, or view the list of available media files.

OVERVIEW



BUTTON FUNCTION

Original		Recharge	
	Power		Power
	A-B		3D
	Clear		Exit
	Open/Close		Eject
	Time		AV
	Resume		Info
	Prog		Sleep
	Audio		Dual
	Subtitle		Subt
	Zoom	 + 	Shift + Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

	8		8
	9		9
	0/10		0
	10+		Guide
	Ran		TV/R
	OSD		Format
	Return		Back
	Repeat		Text
	Slow		Green
	Menu		Menu
	Angle		Red
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		Yellow
	L/R		Smart
	Setup		Options

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stop		Stop
	Play		Play
	I<<		I<<
	>>I		>>I
	N/P		Media
	<<		<<
	>>		>>
	Pause/Step		Pause
	PBC		D. Menu
	Title		List


FAQ

Q: Where can I find a replacement remote control for the JX-2022?

A: You can find a replacement remote control for the JX-2022 at the following website:

<https://tout-telecommandes.fr/fr/Airis/1056630-82619-telecommande-de-remplacement-pour-Airis-JX-2022.html>

Documents / Resources

	Mandis JX-2022 Replacement Remote Control [pdf] Instructions JX-2022 Replacement Remote Control, JX-2022, Replacement Remote Control, Remote Control
---	---

References

- [!\[\]\(71ac35c616fd8bfda805d579390e24d8_img.jpg\) Télécommandes pour tous les appareils](#)
- [User Manual](#)