



# Mandis JXMTA Replacement Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis JXMTA Replacement Remote Control Instruction Manual 

## Contents

- [1 Mandis JXMTA Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 MENU NAVIGATION](#)
- [6 Other Controls](#)
- [7 FUNCTIONS](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)



**Mandis JXMTA Replacement Remote Control**



## Product Information

### Specifications

- **Brand:** Sanyo
- **Model:** JXMTA
- **Color:** Black
- **Compatibility:** Sanyo TVs
- **Remote Control Type:** Replacement
- **Dimensions:** Not specified
- **Weight:** Not specified
- **Link to Product:** [Product Link](#)

### Product Usage Instructions

- **Power On/Off:**  
To turn the TV on or off, press the “Power” button on the remote control.
- **TV/AV Mode:**  
To switch between TV and AV mode, press the “AV” button on the remote control.
- **Mute:**  
To mute the sound, press the “Mute” button on the remote control. Press it again to unmute.
- **Volume Control:**  
To adjust the volume, use the “Vol+” and “Vol-” buttons on the remote control.
- **Navigating Menus:**  
Use the arrow buttons (Up, Down, Right, Left) to navigate through menus and options.
- **Selecting Options:**  
To select an option, press the “OK” button on the remote control.

- **Channel Selection:**

To change the channel, use the “CH+” and “CH-” buttons on the remote control.

## **MENU NAVIGATION**






 

 



 
 

 

 

 
 
 

 

 
 
 
 
 

 
 





 
## **Other Controls**

The remote control also includes additional buttons for features like Guide, Pre Ch, Text, Smart List, and more. Please refer to the user manual for detailed information on these controls.



## FUNCTIONS

Originale	Sostituto
 Power	 Power
 Tv/AV	 AV
 Mute	 Mute
 Timer	 +  Shift + AV
 [ .]/[≡?]	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/[≡o]	 Guide
 P↔P/[≡+]	 Pre Ch

	Menu		Menu
	Sound		Dual
	Picture		Format
	▼ A-B		Options
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	[≡♦]/Bass		Subt
	TXT/TV		Text
	S.SYS		Smart
	Surround		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

## Frequently Asked Questions

What is the compatibility of this remote control?

This remote control is compatible with Sanyo TVs.

Where can I find the user manual for this remote control?

The user manual can be found on the manufacturer's website or included in the product packaging.

---

## Documents / Resources



### [Mandis JXMTA Replacement Remote Control](#) [pdf] Instruction Manual

JXMTA, JXMTA Replacement Remote Control, Replacement Remote Control, Remote Control, Control

## References

- [M Telecomando sostituto di SANYO MI-JXMTA](#)
- [User Manual](#)