



Mandis LD32CGB18 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis LD32CGB18 Remote Control Instructions 

Mandis LD32CGB18 Remote Control



Contents

- [1 Remote Control Instructions](#)
- [2 CUSTOMER SERVICES](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Control Instructions



Original	Replacement
 Power  Mute  1	 Power  Mute / Dimmer  1
 2  3  4	 2  3  4
 5  6  7	 5  6  7
 8  9  Source	 8  9  AV / Input / RDS
 0  Info  DMP	 0  Info / Angle  D.Menu / Top
 Up  EPG	 Up  Guide / EPG / -/--

Original	Replacement
 Left  Enter  Right	 Left  OK  Right
 Menu  Down  Exit	 Menu / Home  Down  Exit / Cancel / Clear
 Vol +  List  CH +	 Vol+  Smart / List  CH+ / Page+
 Vol -  CH -  Fav	 Vol-  CH- / Page-  Fav / Marker / PC
 Sleep  Index  Recall	 Sleep / Timer  Display / Media  Back / Return
 Red / <<  Red / <<	 Red / Netflix / Search  << / Tune-



 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
Original	Replacement
 Green / >>  Green / >>  Yellow / I<<	 >> / Tune+  Green / APP / Repeat  I<< / Preset-
 Green / >>  Green / >>  Yellow / I<<	 Yellow / YouTube / Repeat  Blue / Prime Video / Random  >>I / Preset+

 Text / Play/Pause  Text / Play/Pause  Text / Play/Pause	 Text / Goto  Pause / Step / Freeze  Play / Slow
 Stop / Still  Timer / Subtitle  Size / Aspect	 Stop / Hold  Subtitle / EQ  Zoom / Size
 Cancel [≡X]  Radio  Audio / I/II	 +  Shift + Exit / Cancel / Clear  TV/Radio /  Audio / Lang I/II
 Rec	 Rec / Rec Mode





Original	Replacement
 Power  Mute  1	 Power  Mute / Dimmer  1
 2  3  4	 2  3  4
 5  6  7	 5  6  7
 8  9  [≡?]/Source	 8  9  AV / Input / RDS
 0  [≡i]/Info  DMP	 0  Info / Angle  D.Menu / Top
 Up  EPG	 Up  Guide / EPG / -/--

Original	Replacement
 Left  Enter  Right	 Left  OK  Right
 Menu  Down  Exit	 Menu / Home  Down  Exit / Cancel / Clear
 Vol+  List  CH+	 Vol+  Smart / List  CH+ / Page+
 Vol-  CH-  ♥	 Vol-  CH- / Page-  Fav / Marker / PC
 Sleep  Index  Back	 Sleep / Timer  Display / Media  Back / Return
 Red  <<	 Red / Netflix / Search  << / Tune-





Original	Replacement
 Green  >>  Yellow	 Green / APP / Repeat  >> / Tune+  Yellow / YouTube / Repeat
 I<<  Blue  >>I	 I<< / Preset-  Blue / Prime Video / Random  >>I / Preset+
 Play  Pause  [≡]	 Play / Slow  Pause / Step / Freeze  Text / Goto
 Stop/Still  [≡+]  [≡o]/Subtitle	 Stop / Hold  Picture / Format  Subtitle / EQ
 [≡◆]/[+]  [≡x]  Radio	 Zoom / Size  Setup / OPT /  TV/Radio /
 Audio  Rec	 Audio / Lang I/II  Rec / Rec Mode



CUSTOMER SERVICES

<https://all-remote-controls.co.uk/en/1059007-91687-replacement-remote-control-for-SA32B45.html>

4117H32H ()



Documents / Resources



[Mandis LD32CGB18 Remote Control](#) [pdf] Instructions
LD32CGB18, LD32CGB18 Remote Control, Remote Control, Control

References

- [M Replacement remote control for SA32B45](#)
- [User Manual](#)