



Mandis LD32CGB18 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis LD32CGB18 Replacement Remote Control Instructions 

Contents

- [1 Mandis LD32CGB18 Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 OVERVIEW](#)
- [6 REPLACEMENT PARTS](#)
- [7 BUTTON DESCRIPTION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Mandis

Mandis LD32CGB18 Replacement Remote Control Instructions



Product Information

The product is a remote control designed for use with a specific device. It is available in two versions: “Originale” and “Sostituto”. The “Originale” version has a Power Mute button and numeric keypad, along with various other buttons for navigation and control. The “Sostituto” version also has a Power Mute button, along with additional buttons for AV/Input/RDS, Info/Angle, D.Menu/Top, MUepnu Guide/EPG, and more. Both versions are compatible with the respective devices they are designed for.

Specifications

- Model: LD32CGB18 (Originale), K4117H32H (Sostituto)
- Compatibility: SA32B45
- Page Count: 4

- Website: <https://tutti-i-telecomandi.it/it/1059007-91687-telecomando-di-sostituzione-per-SA32B45.html>

Product Usage Instructions

Original Version

Button Functions

- Power: Turns the device on or off
- Mute: Silences the audio
- Numeric Keypad: Allows input of numbers
- Source: Switches between different input sources
- Info: Displays information about the current content
- DMP Up: Navigates up in the device's media player
- EPG: Opens the electronic program guide
- Left/Enter/Right/Menu/Down/Exit: Navigation buttons for menu and content control
- Vol + / Vol – : Adjusts the volume level
- List: Displays a list of available options
- CH + / CH – : Changes the channel
- Fav: Accesses favorite channels or content
- Sleep: Sets a sleep timer
- Index: Jumps to a specific index or page
- Recall: Recalls the previous action or content
- Color Buttons (Red/Yellow/Blue): Used for specific functions depending on the context
- Text / Play/Pause / Stop / Still: Controls text display, media playback, and pause/stop functionality
- Timer / Subtitle Size / Aspect: Controls timer settings, subtitle size, and aspect ratio
- Cancel [X]: Cancels or exits a current action or menu

Sostituto Version

Button Functions

- Power Mute / Dimmer: Turns the device on or off and adjusts the display brightness
- AV / Input / RDS: Selects AV input or Radio Data System (RDS) options
- Info / Angle: Displays information or adjusts the camera angle (if applicable)
- D.Menu / Top: Opens the device's menu or returns to the top level of a menu
- MUepnu Guide / EPG / -/-: Opens the device's guide or electronic program guide (EPG) and performs various other functions depending on the context
- Left/Enter/Right/Menu/Down/Exit: Navigation buttons for menu and content control
- Vol + / Vol – : Adjusts the volume level
- List: Displays a list of available options
- CH + / CH – : Changes the channel
- Sleep: Sets a sleep timer
- Index: Jumps to a specific index or page

- Back: Returns to the previous screen or action
- Red/Yellow/|>|/Play/Pause: Color buttons and playback controls for specific functions depending on the context
- Pause [||]: Pauses the media playback
- Stop/Still [+]: Stops the media playback or freezes a still image
- [o]/Subtitle [I/I] [+]: Controls subtitles and subtitle settings
- [x] Radio Audio Rec: Controls radio audio and recording options
- Green / APP / Repeat: Green button, app access, or repeat functionality depending on the context
- >>/Tune+: Fast-forward or tune to the next content
- Yellow / YouTube / Repeat: Yellow button, YouTube access, or repeat functionality depending on the context
- |>| / Preset+: Preset selection or playback control depending on the context
- Play / Slow: Starts media playback or adjusts playback speed
- Pause / Step / Freeze: Pauses the media playback, steps through frames, or freezes a still image
- Text / Goto: Controls text display or jumps to a specific location
- Stop / Hold: Stops the media playback or holds a specific action
- Picture / Format: Adjusts picture settings or changes the display format
- Subtitle / EQ: Controls subtitles or equalizer settings
- Zoom / Size: Zooms in or out on the content or adjusts the screen size
- Setup / OPT / TV/Radio / Audio / I/II: Accesses setup options, optical input, TV/Radio modes, and audio selection
- Rec / Rec Mode: Initiates recording or selects recording mode

Frequently Asked Questions

- Q: What is the difference between the “Originale” and “Sostituto” versions?
- A: The “Originale” version is the original remote control for the compatible device, while the “Sostituto” version is a substitute or replacement remote control.
- Q: Where can I find more information or purchase the remote control?
- A: For more information and purchasing options, you can visit the following website: <https://tutti-i-telecomandi.it/it/1059007-91687-telecomando-di-sostituzione-per-SA32B45.html>

OVERVIEW

LD32CGB18 ()



REPLACEMENT PARTS

Originale

Sostituto

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

	Green / >>		>> / Tune+
	Green / >>		Green / APP / Repeat
	Yellow / I<<		I<< / Preset-
	Yellow / I<<		Yellow / YouTube / Repeat
	Blue / >>I		Blue / Prime Video / Random
	Blue / >>I		>>I / Preset+
	Text / Play/Pause		Text / Goto
	Text / Play/Pause		Pause / Step / Freeze
	Text / Play/Pause		Play / Slow
	Stop / Still		Stop / Hold
	Timer / Subtitle		Subtitle / EQ
	Size / Aspect		Zoom / Size
	Cancel [≡X]	 + 	Shift + Exit / Cancel / Clear
	Radio		TV/Radio /
	Audio / I/II		Audio / Lang I/II
	Rec		Rec / Rec Mode

BUTTON DESCRIPTION



<https://tutti-i-telecomandi.it/it/1059007-91687-telecomando-di-sostituzione-per-SA32B45.html>

OVERVIEW

K4117H32H ()



REPLACEMENT PARTS

Originale

Sostituto

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-

	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Stop/Still		Stop / Hold
	[≡+]		Picture / Format
	[≡o]/Subtitle		Subtitle / EQ
	[≡◆]/[+]		Zoom / Size
	[≡x]		Setup / OPT /
	Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode

BUTTON DESCRIPTION



<https://tutti-i-telecomandi.it/it/1059007-91687-telecomando-di-sostituzione-per-SA32B45.html>

Documents / Resources

	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions SA32B45, LD32CGB18, K4117H32H, LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control
	Mandis LD32CGB18 Replacement Remote Control [pdf] Instructions LD32CGB18 Replacement Remote Control, LD32CGB18, Replacement Remote Control, Remote Control, Control

References

- [M Replacement remote control for SA32B45](#)
- [M Telecomandi per tutti gli apparecchi](#)
- [M Telecomando sostituto di SA32B45](#)
- [User Manual](#)