



# Mandis Loewe RC3H Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Loewe RC3H Replacement Remote Control Instructions 

## Contents

- [1 Mandis Loewe RC3H Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Mandis Loewe RC3H Replacement Remote Control**



## Product Information

### Specifications

- Brand: Loewe
- Model: RC3H
- Compatibility: Original and Replacement
- Color: Black
- Dimensions: Not specified
- Weight: Not specified
- Power: 2x AAA batteries (not included)

### Product Usage Instructions



Original	Replacement	Original	Replacement
	Power		Info
	Mute		Ok
	1		Up
	2		Down
	3		Right
	4		Left
	5		Ch +
	6		Ch -
	7		Vol +
	8		Vol -
	9		Red
	0		Green
	Guide		Yellow
	Options		Blue
	Menu		Play
	Text		Stop
	Exit		Pause



### Original Remote Control Button Functions:

- Power: Turns the device on or off
- Mute: Mutes or unmutes the audio
- 1-9, 0: Numeric buttons for channel selection or inputting numbers
- EPG/Guide: Accesses the electronic program guide
- PIP/Options: Activates picture-in-picture or accesses additional options
- Menu: Opens the main menu
- Text/Exit: Displays teletext or exits the current menu
- End: Ends a call or exits a menu
- Info: Displays information about the current program or content
- OK: Confirms a selection or action
- Up/Down/Right/Left: Navigation buttons for menu or program selection
- PR+/Ch+: Changes to the next available channel
- PRVol+/Ch Vol+: Adjusts the program or channel volume
- VolRed/C.Set: Adjusts the volume or accesses color settings
- Green/SV: Performs a specific function assigned to the green button or accesses sound and video settings
- Yellow/Zoom: Performs a specific function assigned to the yellow button or zooms in on the screen
- Blue/Title: Performs a specific function assigned to the blue button or displays the title of the current content
- Play/Stop/Pause: Controls media playback

### Replacement Remote Control Button Functions:

Original	Replacement
 Rec	 Rec
 >>	 >>
 <<	 <<
 Home	 Smart
 Radio	 TV/R
 Rec Menu	 +  Shift + Rec
 Marker	 Pre Ch
 Time Shift	 Format
 List	 List

- Power: Turns the device on or off
- Mute: Mutes or unmutes the audio
- 1-9, 0: Numeric buttons for channel selection or inputting numbers
- Guide/Options: Accesses the program guide or additional options
- Menu: Opens the main menu
- Text/Exit: Displays teletext or exits the current menu
- Info: Displays information about the current program or content
- OK: Confirms a selection or action
- Up/Down/Right/Left: Navigation buttons for menu or program selection
- Ch+/Vol+: Changes to the next available channel or adjusts the volume
- Red/Green/Yellow/Blue: Performs specific functions assigned to each colored button
- Play/Stop/Pause: Controls media playback

## Frequently Asked Questions

How do I replace the batteries in the remote control?

To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert two new AAA batteries, ensuring they are correctly positioned according to the polarity markings. Close the compartment securely.

Can I use the replacement remote control with any Loewe device?

Yes, the replacement remote control is compatible with various Loewe devices. However, it is always recommended to check the compatibility list or consult the manufacturer's website for specific compatibility information.

Yes, the replacement remote control is compatible with various Loewe devices. However, it is always recommended to check the compatibility list or consult the manufacturer's website for specific compatibility information.

Press the EPG/Guide button on the original remote control or the Guide/Options button on the replacement remote control. This will display the electronic program guide on your TV screen, allowing you to browse through available channels and program information.




Press the EPG/Guide button on the original remote control or the Guide/Options button on the replacement remote control. This will display the electronic program guide on your TV screen, allowing you to browse through available channels and program information.

The Play/Stop/Pause button controls media playback. When playing media content, press the button once to pause the playback. Press it again to resume playback. Press and hold the button to stop the playback altogether.

Loewe RC3H

<https://all-remote-controls.co.uk/en/Loewe/1039097-60774-replacement-remote-control-for-Loewe-RC3H-89600A04.html>

Documents / Resources

	<a href="#">Mandis Loewe RC3H Replacement Remote Control</a> [pdf] Instructions Loewe RC3H Replacement Remote Control, Loewe RC3H, Replacement Remote Control, Remote Control
	<a href="#">Mandis Loewe RC3H Replacement Remote Control</a> [pdf] Instructions Loewe RC3H Replacement Remote Control, Loewe RC3H, Replacement Remote Control, Remote Control
	<a href="#">Mandis Loewe RC3H Replacement Remote Control</a> [pdf] Instructions RC3H 89600A04, Loewe RC3H Replacement Remote Control, Loewe RC3H, Replacement Remote Control, Remote Control, Control, Remote

References

- [M Remote controls for all devices](#)
- [M Replacement remote control for LOEWE RC3H \(89600A04\)](#)
- [User Manual](#)